


Universal Post Attachment Plates

Steel Trip Edge Pusher Plows

PARTS LIST

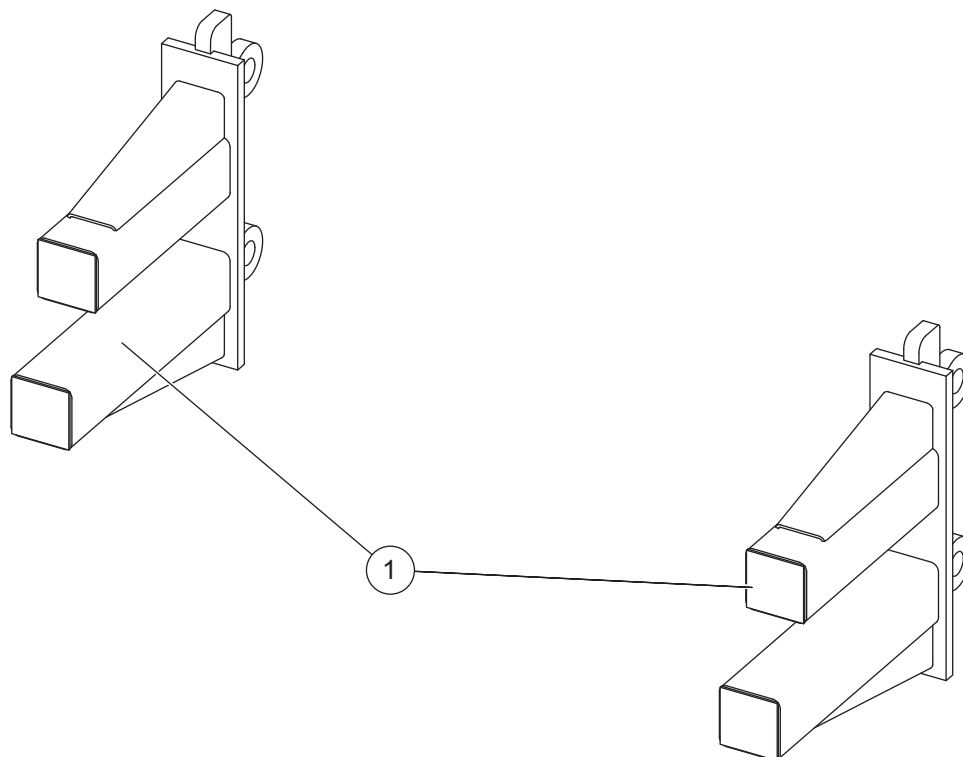

79363 Universal Post Attachment Plate Kit			
Item	Part	Qty	Description
1	79374	2	Universal Post Attachment Plate

⚠ WARNING

Do not exceed GVWR or GAWR, including blade and ballast.

⚠ CAUTION


Read this document before installing the universal post attachment plates.

⚠ CAUTION

Use standard methods and practices when attaching snowplow and installing accessories, including proper personal protective safety equipment.

INSTALLATION INSTRUCTIONS

Install the loader attachment plates to the coupler mounting hubs on the back of the blade using a 1-7/16" x 6-1/2" pin, two 1-1/2" x 2-1/2" x 1-1/2" doublers, and two 7/16" x 1-3/4" linchpins in each mounting pin location on the attachment plates, as shown.

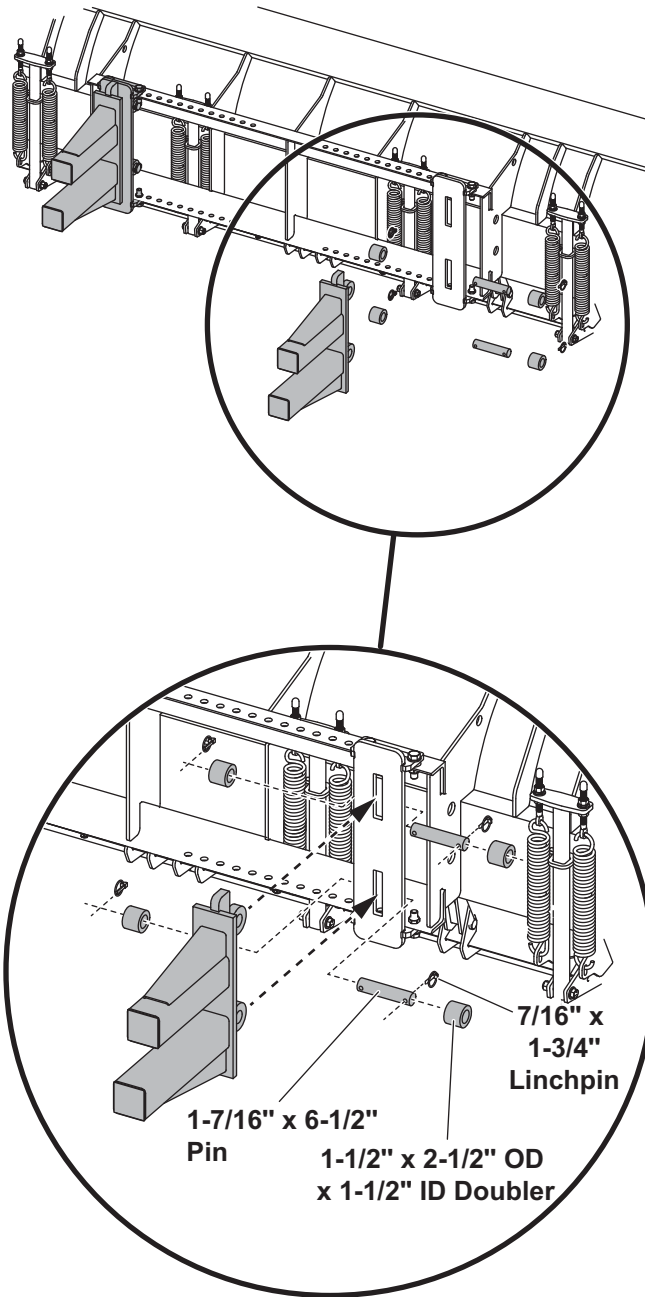


NOTE: Hardware and coupler mounting hubs shown in the image above are not included in the attachment plate kit. They are shipped with the pusher plow.


ATTACHING SNOWPLOW TO LOADER

The Binder Kit (PN 72042, sold separately) must be used for bucket loader installations.

1. Guide the leading edge of the loader bucket into the 2-post receptacles on the attachment plates.

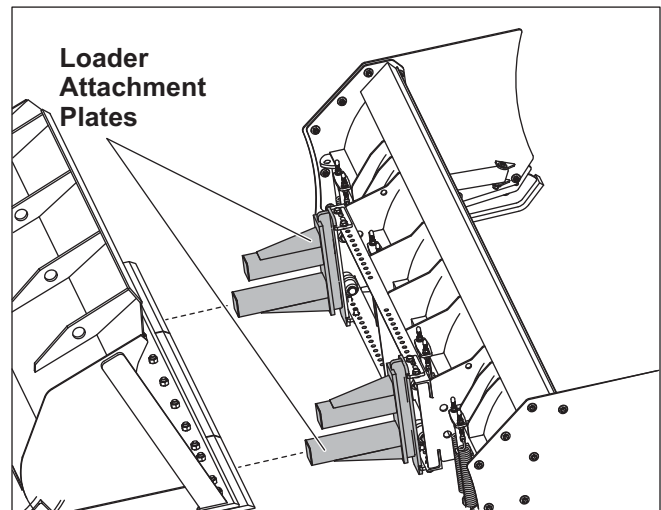

The bucket edge will rest against the attachment plates. The upper posts will fit inside the bucket and should be centered. The lower posts will be positioned under the bucket.

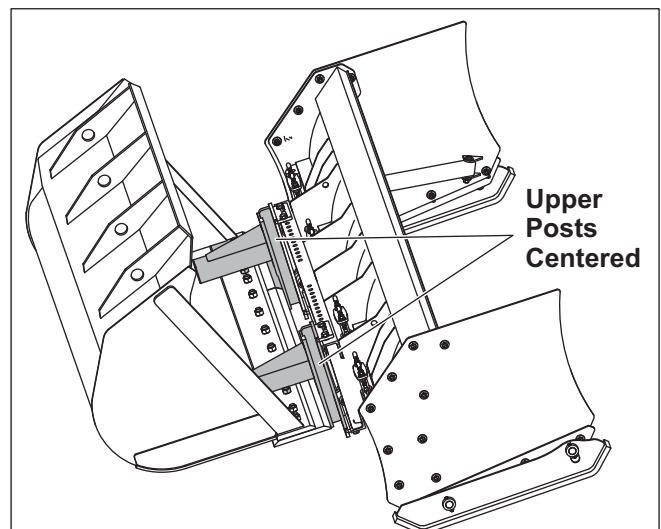


2. Attach the chains and ratchet binder to secure the plow to the bucket, as described in the next section.

Install Chains and Ratchet Binder

⚠ CAUTION

DO NOT attempt to curl your coupler to lock in the connection to the pusher plow in lieu of using the binder chains.

1. Use a supplied clevis attachment to connect one of the supplied chains to the attachment point on one side of the pusher plow. Drop the other end of the chain into the welded-on grab hook. Leave enough slack to allow for centering the pusher plow on the loader bucket.

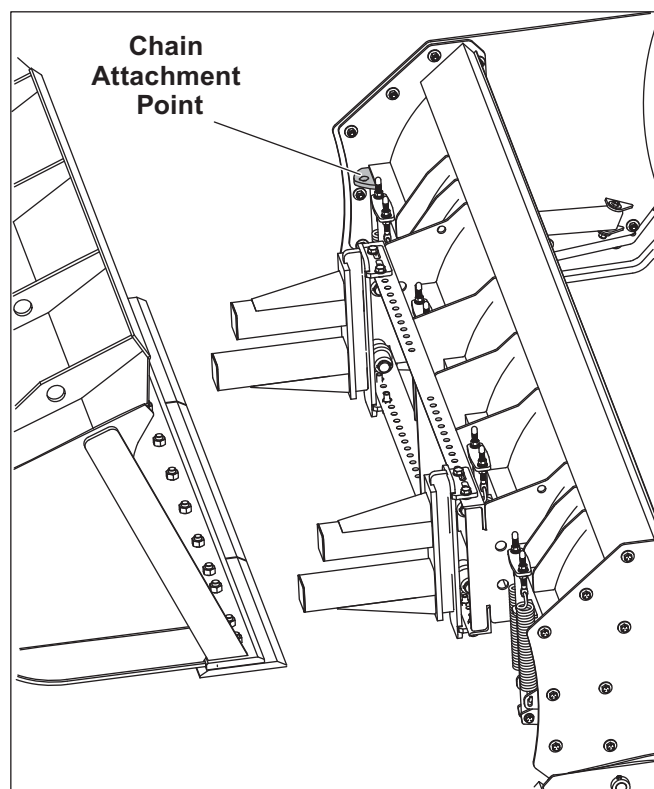

Repeat on the opposite side of the snowplow using the second length of chain.

2. Raise the bucket to lift the snowplow off the ground. Add or remove slack in the chains as necessary to center the plow on the bucket, making sure one of the chains is pulled taut.
3. Using the supplied ratchet binder, take up the remaining slack in the second chain.

Attaching the Unit

Your loader model is equipped with the manufacturer's OEM quick coupler.

1. Remove the bucket from the loader.
2. Drive the machine into the coupler located on the back of the pusher plow with the prime mover connection tilted slightly forward.
3. Raise the arms of the prime mover to mate with the hooks on the OEM quick coupler.
4. Tilt the arms backward while lifting the pusher plow slightly off the ground.
5. Engage the locking pins.

NOTE: The coupler assembly may need to be repositioned to remain centered and aligned with the prime mover.

Copyright © 2020 Douglas Dynamics, LLC. All rights reserved. This material may not be reproduced or copied, in whole or in part, in any printed, mechanical, electronic, film, or other distribution and storage media, without the written consent of the company. Authorization to photocopy items for internal or personal use by the company's outlets or snowplow owner is granted.

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. This equipment manufacturer or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. The company offers a limited warranty for all snowplows and accessories. See separately printed page for this important information.

Printed in U.S.A.