


Wear / Curb Guard Kit

6' 8" & 7' 2" Compact Snowplows

PARTS LIST

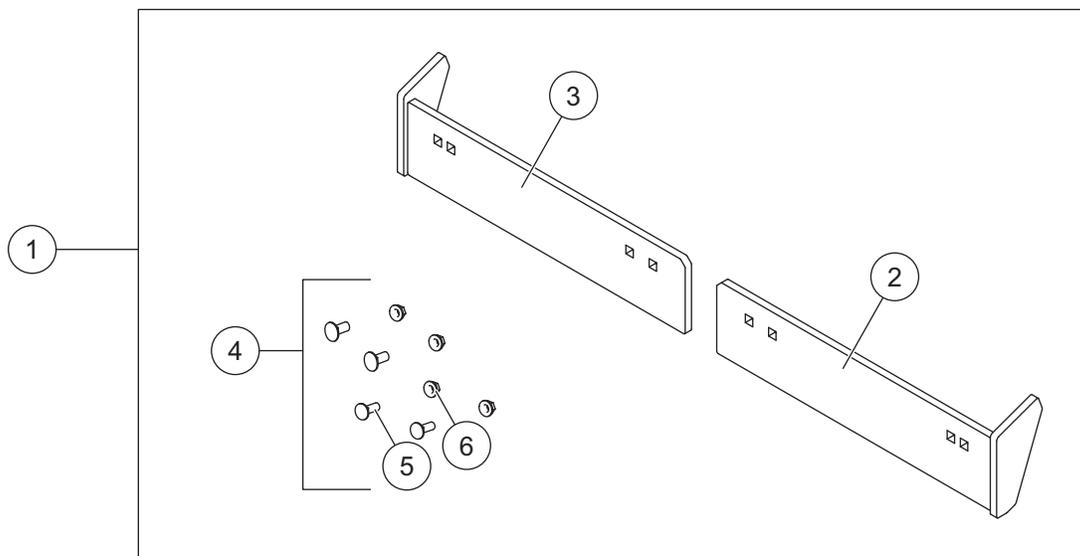

Wear/Curb Guard Kit – Compact Blades							
Item	Part	Qty	Description	Item	Part	Qty	Description
1	85332	1	Wear/Curb Guard – Kit, 6' 8" & 7' 2" Compact Blade	3	85334	1	Curb Guard – Compact Blade, PS
2	85333	1	Curb Guard – Compact Blade, DS	4	76384	1	Bolt Bag
76384 Bolt Bag							
5		4	1/2-13 x 2 Carriage Bolt G5	6		4	1/2-13 Flanged Locknut
ns = not shown				G = Grade			

⚠ WARNING

Do not exceed GVWR or GAWR, including blade and ballast. The rating label is found on the driver-side vehicle door cornerpost.

⚠ WARNING

Blade can drop unexpectedly. Place blade on jack stands. Failure to do so could result in serious personal injury.

⚠ CAUTION

Read this document before installing the wear/curb guard kit.

⚠ CAUTION

Use standard methods and practices when attaching snowplow and installing accessories, including proper personal protective safety equipment.


⚠ CAUTION

See your sales outlet/Web site for specific vehicle application recommendations before installation. The online selection tool has specific vehicle and snowplow requirements.


INSTALLATION INSTRUCTIONS

1. Park the vehicle on a smooth, level, hard surface, such as concrete. Raise the blade, then turn the control OFF. From the side of the blade assembly, place jack stands under the blade.
2. Turn the control ON and lower the blade so the blade rests securely on the jack stands. Turn the control OFF. Turn the vehicle ignition to the "OFF" position and remove the key.
3. Remove the two outermost carriage bolts from one end of the blade.
4. Align the holes in the curb guard with the holes in the blade.

The curb guards in the 85332 kit have two sets of holes to align with the existing holes in 6' 8" or 7' 2" blades, as shown.

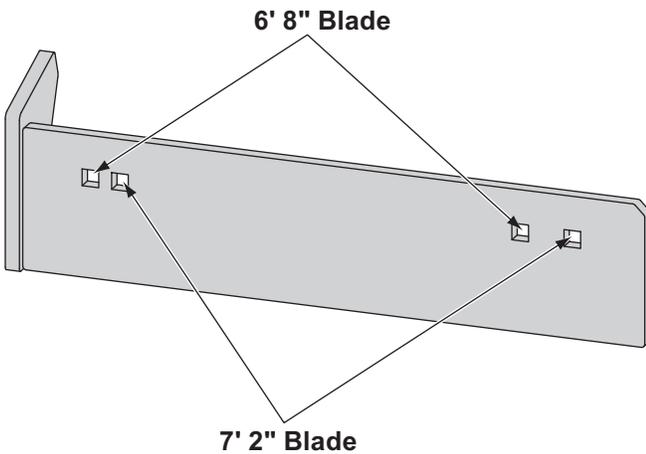

5. Install the curb guard to the blade using two carriage bolts and locknuts. Hand tighten.

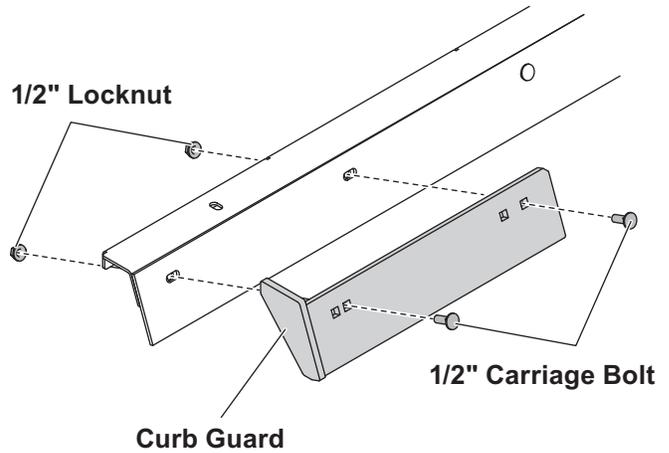

6. Repeat Steps 3–5 on the other end of the blade.
7. Fully tighten the fasteners to 75 ft-lb.
8. Turn the vehicle ignition and snowplow control ON. Raise the blade slightly. Turn the control OFF and remove the jack stands.
9. Stand 8 feet clear of the blade, and lower the blade to the ground.
10. Level the A-frame according to the snowplow Installation Instructions or Owner's Manual.

Copyright © 2017 Douglas Dynamics, LLC. All rights reserved. This material may not be reproduced or copied, in whole or in part, in any printed, mechanical, electronic, film or other distribution and storage media, without the written consent of the company. Authorization to photocopy items for internal or personal use by the company's outlets or snowplow owner is granted.

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. This equipment manufacturer or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. The company offers a limited warranty for all snowplows and accessories. See separately printed page for this important information.

Printed in U.S.A.