

Brine Pro™ 2000 Brine Maker

Quick Start Guide

INSTRUCTIONAL VIDEOS

For help with install and setup of your Brine Pro™ 2000 brine maker, review our Videos on www.snowexproducts.com in the Maintenance Toolbox located under Support, Parts & Service.

INSTALLATION

The brine maker should be installed in a location that:

- Is indoors
- Is kept above freezing
- Is suitable for spray-down cleaning
- Has 220 V AC main power with a 50 A breaker
- Has a fresh water garden hose connection with between 5 and 20 gal/min flow

Please consult the Installation section of the Owner's Manual for more details.


RUNNING THE MACHINE

The basic order of operations when producing brine with the unit is outlined in the Basic Operation Flowchart, to the right. More details can be found under "Normal Brine Production" in the Operating Instructions section of the Owner's Manual.

PRIME PUMP

Make sure the circulation pump is appropriately primed every time the unit is started. If the pump does not automatically prime within 20 seconds of the circulation pump starting, stop the unit and manually prime the pump following the instructions under "Pump Priming" in the Machine Introduction section of the Owner's Manual.

BASIC OPERATION FLOWCHART

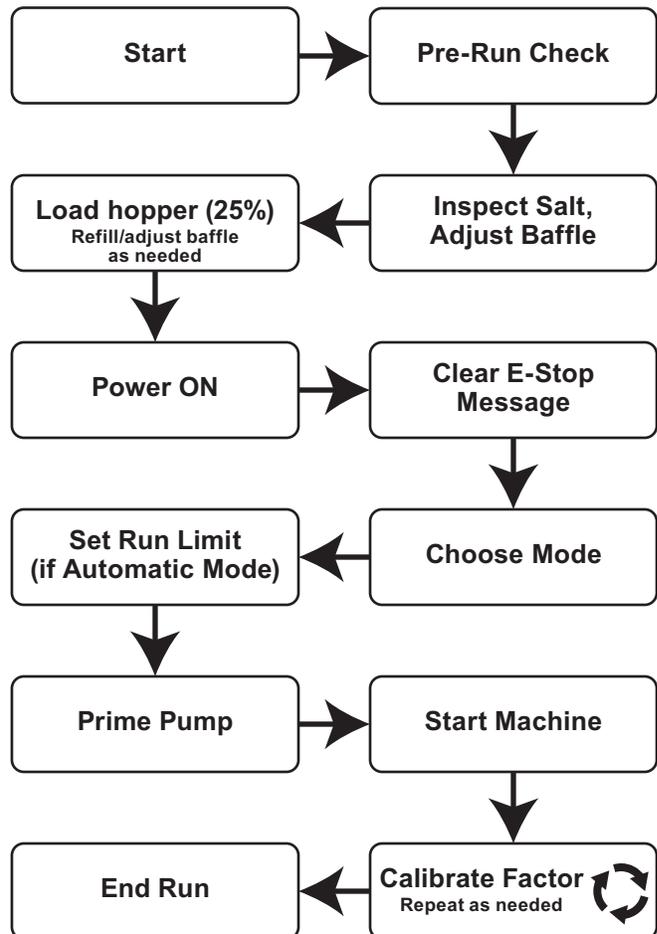

CALIBRATION

Since local water and salt supply quality can have a significant effect on the measurement of salinity, the brine maker is shipped from the factory calibrated to produce brine at a lower salinity than what is indicated on the touchscreen. For best results, calibrate the brine maker on its first run. Follow the instructions under "Calibration Procedure" in the Operation section of the Owner's Manual or the flowchart on the back of this form to calibrate the machine. Additionally, the user should verify the calibration whenever salt or water supplies change.

TrynEx International, LLC reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. TrynEx International, LLC offers a limited warranty for all liquid systems and accessories. See separately printed page for this important information. The following are registered (®) or unregistered (™) trademarks of Douglas Dynamics, LLC: Brine Pro™, SnowEx®.

Printed in U.S.A.

