 


JRB 416 Attachment Plates

Steel Trip Edge Pusher Plows

PARTS LIST

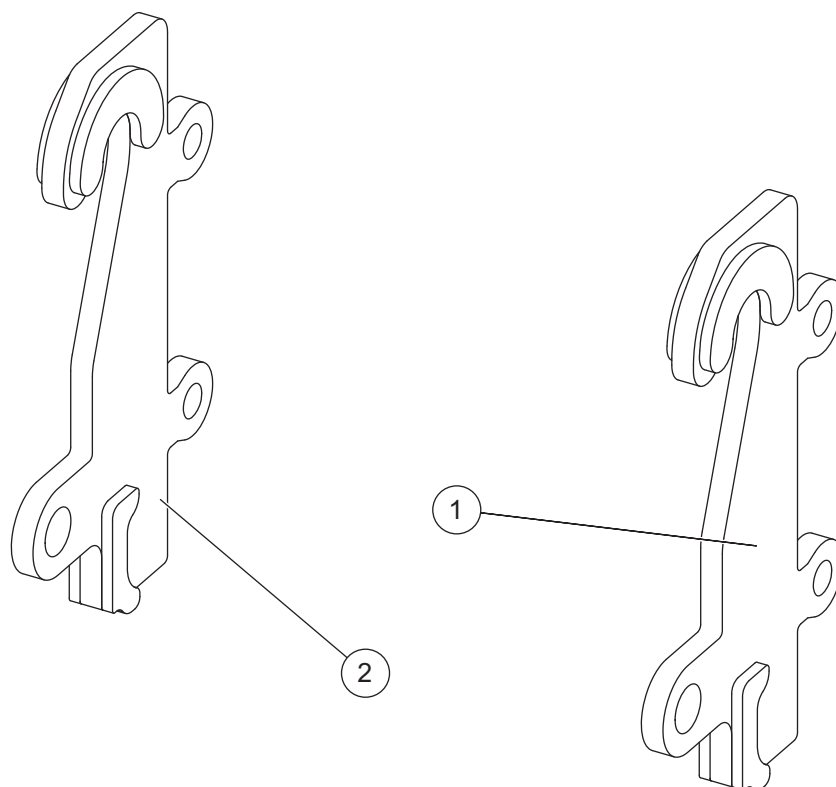

79364 JRB 416 Attachment Plates Kit			
Item	Part	Qty	Description
1	79375	1	JRB 416 Attachment Plate – DS
2	79376	1	JRB 416 Attachment Plate – PS

⚠ WARNING

Do not exceed GVWR or GAWR, including blade and ballast.

⚠ CAUTION

Read this document before installing the JRB 416 attachment plates.

 
⚠ CAUTION

Use standard methods and practices when attaching snowplow and installing accessories, including proper personal protective safety equipment.

INSTALLATION INSTRUCTIONS

Install the JRB 416 attachment plates to the coupler mounting hubs on the back of the blade using a 1-7/16" x 6-1/2" pin, two 1-1/2" x 2-1/2" OD x 1-1/2" ID doublers, and two 7/16" x 1-3/4" linchpins in each mounting pin location on the attachment plates, as shown.


NOTE: Hardware and coupler mounting hubs shown in the image are not included in the attachment plate kit. They are shipped with the pusher plow.

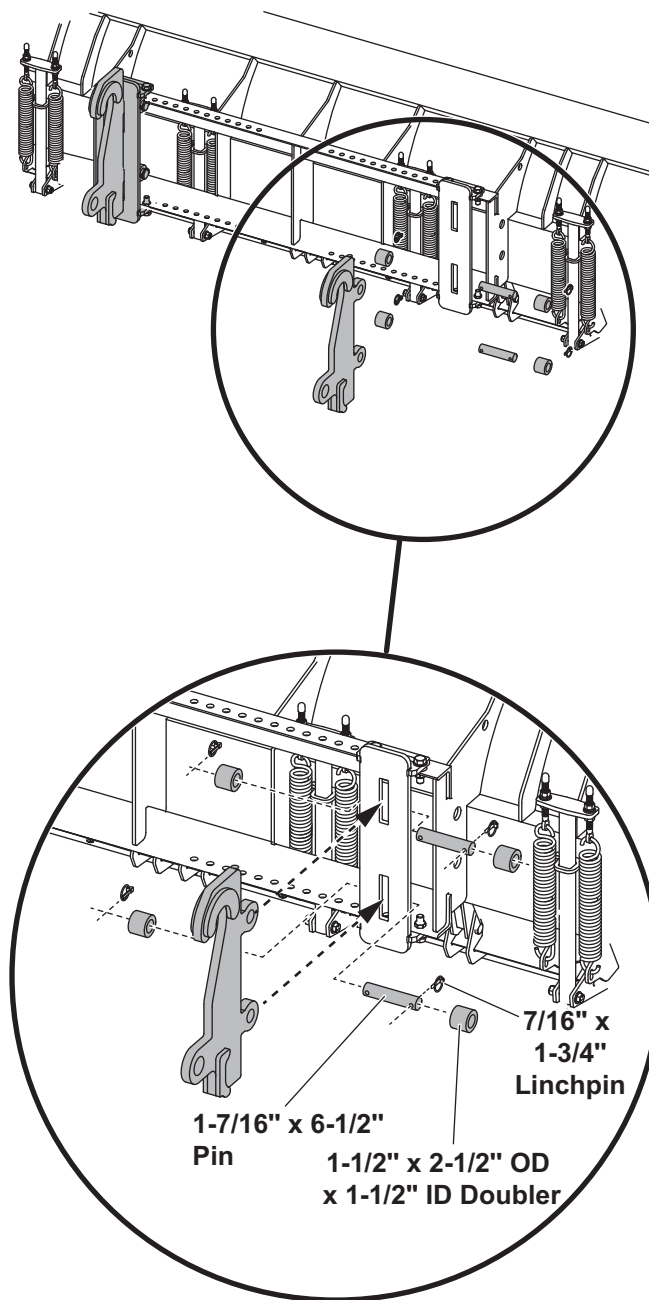

ATTACHING SNOWPLOW TO LOADER

The pusher plow JRB 416 attachment plates are designed to work with the vehicle's OEM attachment bracket.

 1. Position the loader close to the snowplow with the mount points on the loader plate aligned with the pusher plow JRB 416 attachment plates.
2. Tilt the loader plate forward and position the top edge of the plate under the receiving pockets on the attachment plates.

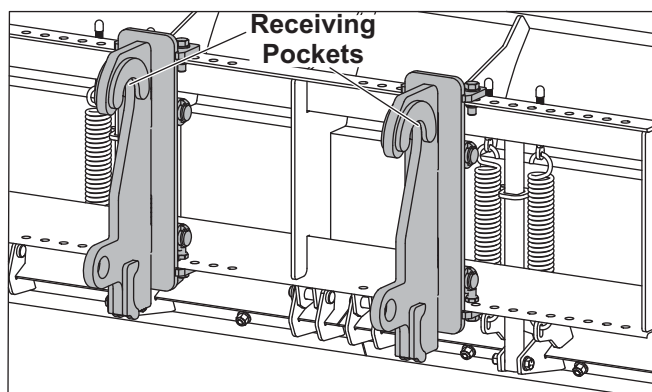

3. Slowly raise the arms on the loader and tilt the loader plate toward the cab until the snowplow mount plates are flush with the JRB 416 attachment plate.

Copyright © 2020 Douglas Dynamics, LLC. All rights reserved. This material may not be reproduced or copied, in whole or in part, in any printed, mechanical, electronic, film, or other distribution and storage media, without the written consent of the company. Authorization to photocopy items for internal or personal use by the company's outlets or snowplow owner is granted.

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. This equipment manufacturer or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. The company offers a limited warranty for all snowplows and accessories. See separately printed page for this important information.

Printed in U.S.A.