


Poly Cutting Edge Kit

6', 6'-8", and 7'-2" Straight Blades

PARTS LIST

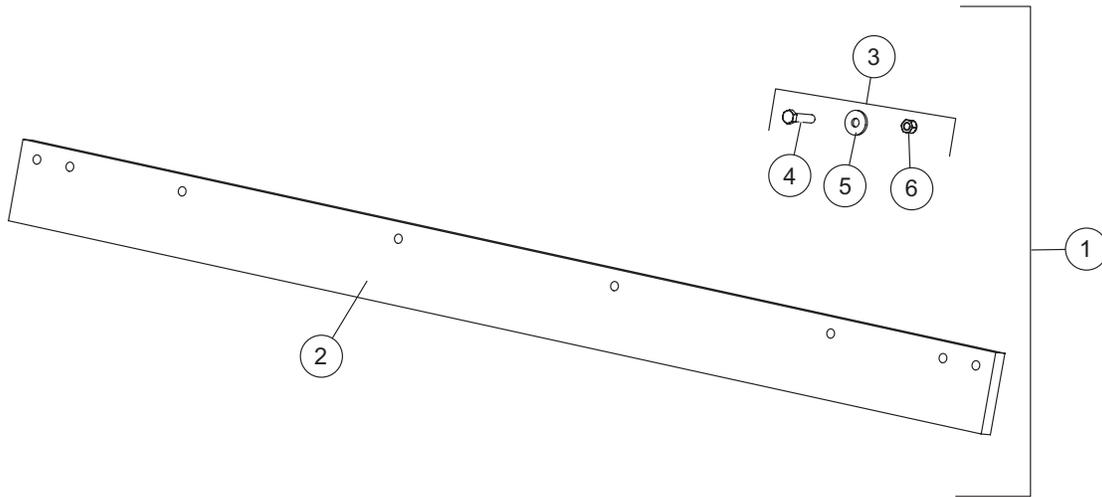

6' Cutting Edge Kit shown.

Poly Cutting Edge Kit				
Item	Description	Part Number		
		6' Blade	6'-8" Blade	7'-2" Blade
1	Poly Cutting Edge Kit	76475	76476	76477
2	Poly Cutting Edge	76470	76471	76472
3	Bolt Bag – Poly Cutting Edge	86469	86470	

86469 Bolt Bag – 6' Poly Cutting Edge					
Item	Qty	Description	Item	Qty	Description
4	8	1/2-13 x 2-1/4 Hex Cap Screw G5	6	8	1/2-13 Hex Locknut GB
5	8	3/16" Washer			
86470 Bolt Bag – 6'-8" or 7'-2" Poly Cutting Edge					
4	6	1/2-13 x 2-1/4 Hex Cap Screw G5	6	6	1/2-13 Hex Locknut GB
5	6	3/16" Washer			

G = Grade

INSTALLATION INSTRUCTIONS

⚠ WARNING

Do not exceed GVWR or GAWR, including blade and ballast. The rating label is found on the driver-side vehicle door cornerpost.

⚠ WARNING

Blade can drop unexpectedly. Place A-frame on jack stands. Failure to do so could result in serious personal injury.

⚠ CAUTION

Read this document before installing the poly cutting edge.

⚠ CAUTION


Use standard methods and practices when attaching snowplow and installing accessories, including proper personal protective safety equipment.

⚠ CAUTION

See your sales outlet/website for specific vehicle application recommendations before installation. The online selection tool has specific vehicle and snowplow requirements.

1. Park the vehicle on a smooth, level, hard surface, such as concrete. Raise the blade, then turn the control OFF. From the side of the blade assembly, place jack stands under the A-frame.

2. Turn the control ON and lower the blade so the A-frame rests securely on the jack stands. Turn the control OFF. Turn the vehicle ignition to the "OFF" position and remove the key.
3. Remove the existing cutting edge and fasteners from the blade.
4. Insert the supplied 1/2" x 2-1/4" hex cap screws through the cutting edge bar, cutting edge, and blade base angle. Install a 3/16" washer and 1/2" locknut onto each bolt and torque to 50 ft-lb.

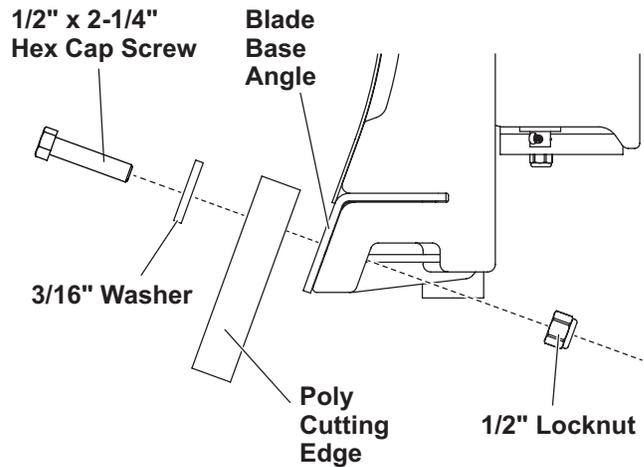

5. Turn the vehicle ignition and snowplow control ON. Raise the blade slightly. Turn the control OFF and remove the jack stands.
6. Stand 8 feet clear of the blade, and lower the blade to the ground.

Copyright © 2017 Douglas Dynamics, LLC. All rights reserved. This material may not be reproduced or copied, in whole or in part, in any printed, mechanical, electronic, film or other distribution and storage media, without the written consent of the company. Authorization to photocopy items for internal or personal use by the company's outlets or snowplow owner is granted.

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. This equipment manufacturer or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. The company offers a limited warranty for all snowplows and accessories. See separately printed page for this important information.