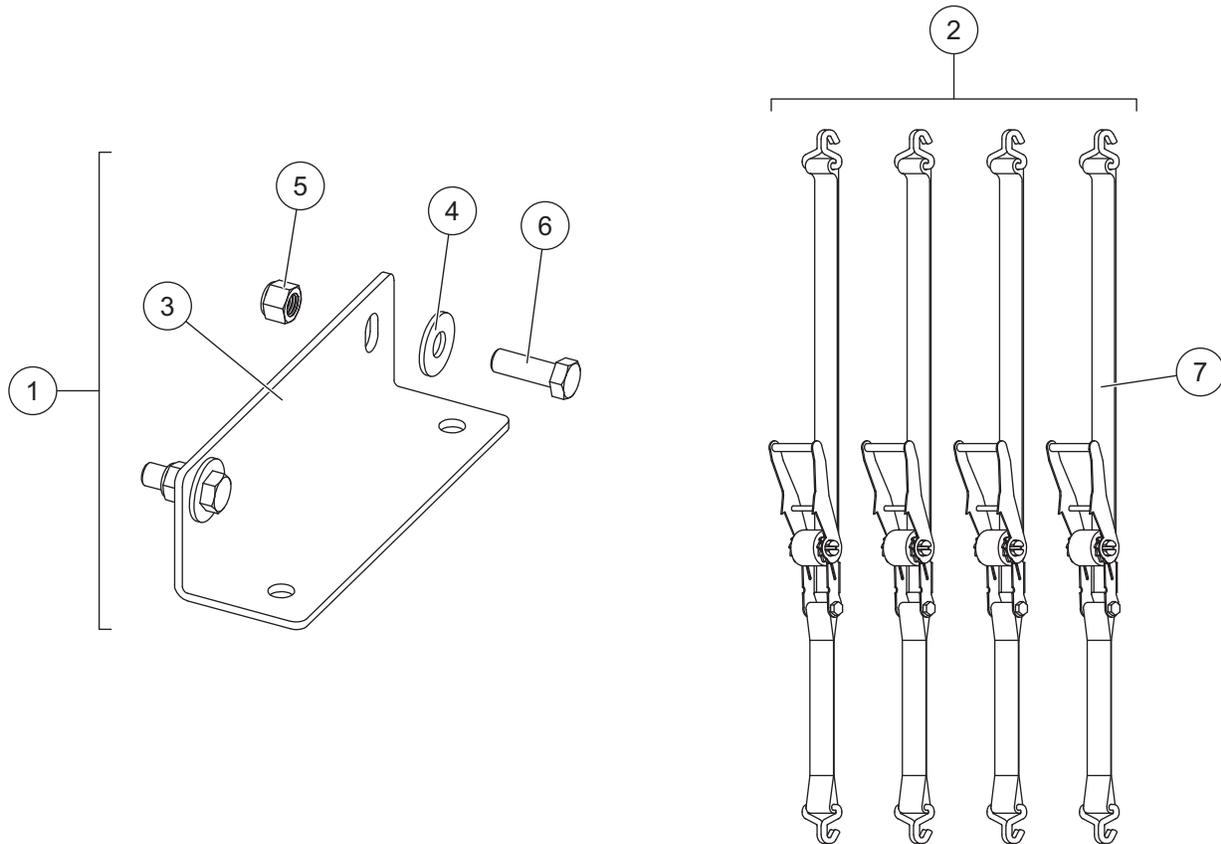


# Strap & Mount Kit

## Liqui Maxx™ Sprayer Systems

**PARTS LIST**


UMK-200 Brackets, Hardware and Ratchet Straps							
Item	Part	Qty	Description	Item	Part	Qty	Description
1	76135	6	Replacement Bracket Kit, UMK-200	2	D6856	1	Ratchet Strap (pkg of 4)
<b>Item 1</b>				<b>76135 Replacement Bracket Kit, UMK-200</b>			
3		1	Mounting Angle	5		2	1/2-13 Hex Locknut G5
4		2	1/2 Flat Washer	6		2	1/2-13 x 1-1/2 Hex Cap Screw G5
<b>Item 2</b>				<b>D6856 Ratchet Strap (pkg of 4)</b>			
7		4	Ratchet Strap, 2" x 10', 3300 lb				

G = Grade

**INSTALLATION INSTRUCTIONS**

**⚠ WARNING**

Do not exceed GVWR or GAWR ratings as found on the driver-side vehicle door cornerpost.

**⚠ WARNING**

Sprayer shall be bolted to vehicle frame. Do not rely on the tie-down chains or straps alone to hold sprayer in vehicle.


**⚠ CAUTION**

Read this document before installing the Strap & Mount Kit.

**⚠ CAUTION**

Use standard methods and practices when attaching sprayer and installing accessories, including proper personal protective safety equipment.


1. Install the spacer between the front of the cradle frame of the sprayer and the bulkhead of the bed of the truck as shown.

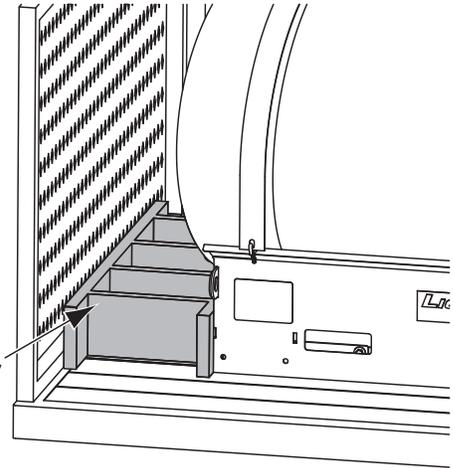

Wood Spacer

Failure to install a spacer could result in damage to the sprayer or vehicle.

2. Fasten brackets to sprayer cradle with hardware provided.

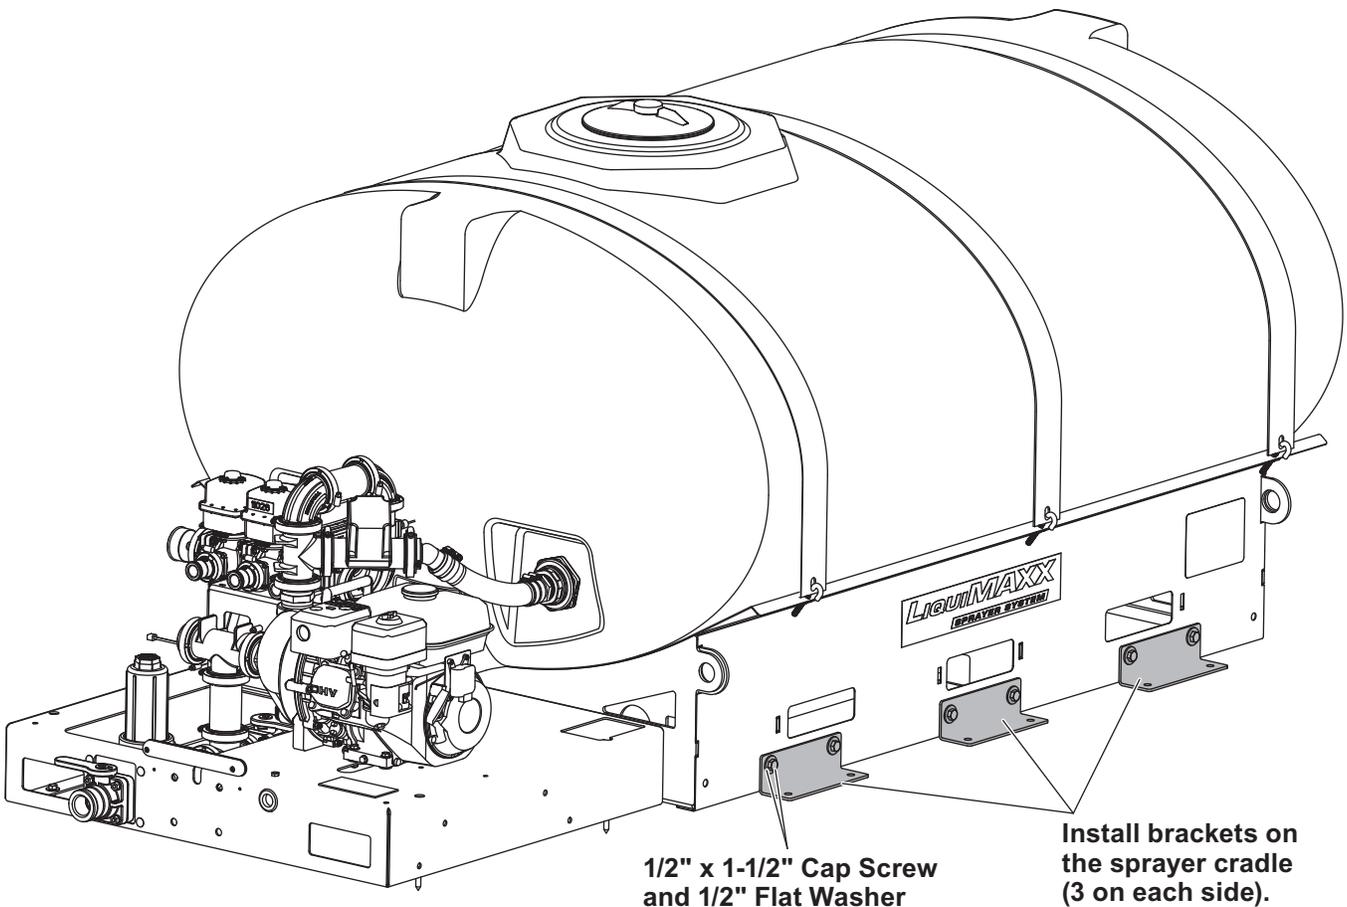

1/2" x 1-1/2" Cap Screw and 1/2" Flat Washer


Install brackets on the sprayer cradle (3 on each side).

3. Install the sprayer in the truck bed against the spacer as described in the Installations Instructions for the Liqui Maxx™ sprayer system.


**⚠ CAUTION**

**Before drilling any holes, check both sides of the material for any wires, fuel lines, fuel tanks, etc., that may be damaged by drilling.**

4. Using the mounting angles, mark and drill the holes in truck bed frame.

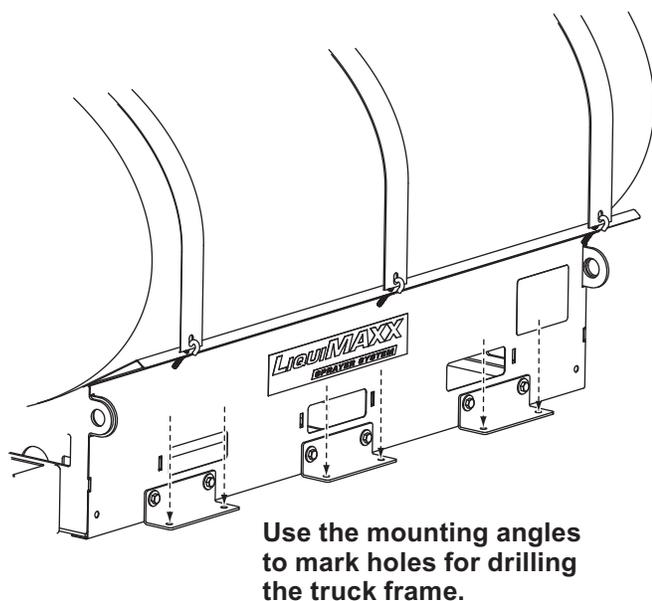

5. Bolt the sprayer to the truck frame through the brackets. Use 1/2" hardware as required by vehicle applications. If the brackets are not directly over the truck box supports, the truck bed must be braced to the frame to prevent buckling or deforming the truck bed.
6. Using the ratchet straps (two per side), strap the sprayer to the truck in a configuration to keep the equipment from shifting. Check tightness periodically.

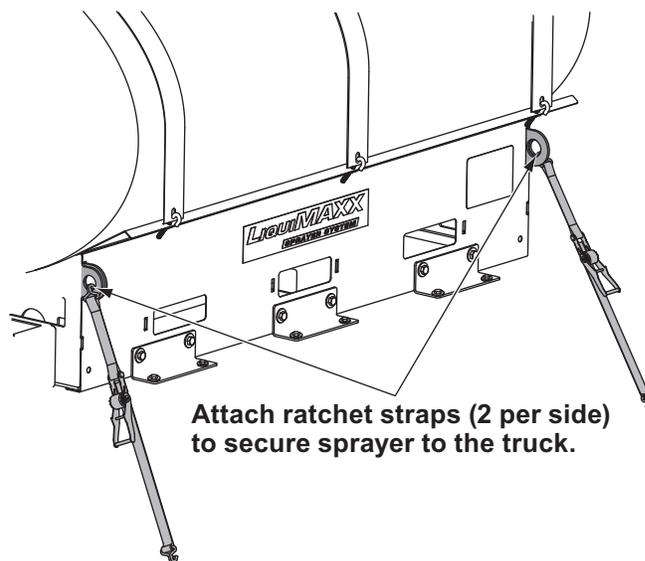

**NOTE: Pay special attention when drilling or clamping dissimilar metals to aluminum bodies. Galvanic corrosion can occur if not handled properly. Contact vehicle manufacturer for recommended attachment practices.**

Copyright © 2017 Douglas Dynamics, LLC. All rights reserved. This material may not be reproduced or copied, in whole or in part, in any printed, mechanical, electronic, film, or other distribution and storage media, without the written consent of TrynEx International, LLC. Authorization to photocopy items for internal or personal use by TrynEx International, LLC, outlets or sprayer owner is granted.

TrynEx International, LLC, reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. TrynEx International, LLC, or the vehicle manufacturer may require or recommend optional equipment for snow/ice removal. TrynEx International, LLC, offers a limited warranty for all sprayers and accessories. See separately printed page for this important information. The following are registered (®) or unregistered (™) trademarks of Douglas Dynamics, LLC: Liqui Maxx™, SnowEx®.

**Printed in U.S.A.**

---