


Installation Instructions

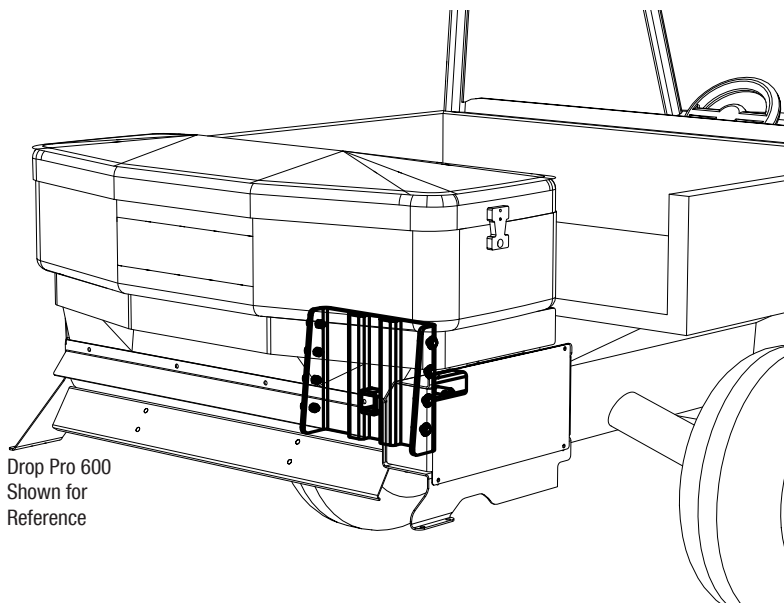

Drop Pro 600
Shown for
Reference

TPR-020



CUSTOMER COPY

Madison Heights, Michigan 48071
800-SALTERS
www.snowexproducts.com

Introduction 3

Fastener Torque Chart..... 3

Safety 4

Installation Instructions 5

Notes.....6-7

Have a question or need assistance?

SnowEx Customer Care
(800) SALTERS
or (248) 586-3500

Monday through Friday 8:00 AM to 4:30 PM EST
Fax: (248) 691-8378
E-mail: customercare@trynexfactory.com
Website: www.snowexproducts.com

These Installation Instructions have been designed to guide you while installing your TPR-020 Mount Kit. Follow these instructions with care to ensure performance and longevity.

Please read and understand the safety warnings associated with the installation and assembly of the spreader before beginning. In addition the safety information in these instructions, observe general safety guidelines to maintain your safety and the safety of those around you. To install your TPR you will need a set of wrenches, a ratchet and sockets.



THIS SIGN SHOULD ALERT YOU:

This Safety Alert Symbol is used to pinpoint instructions that, if not carefully followed, can create a safety hazard. When you see this symbol in this manual or on the machine itself, be alert – your safety and the safety of others is involved.

Defined below are the Safety Alert Messages.



DANGER

Information that, if not carefully followed, can cause death.



WARNING

Information that, if not carefully followed, can cause serious personal injury or death.



CAUTION

Information that, if not carefully followed, can cause minor injury or damage to equipment.



IMPORTANT

This symbol is used to call out information that is important to follow carefully.

FASTENER TORQUE CHART

Use this chart as a guide for tightening hardware.

Hand-tighten all fasteners until complete, then tighten to the recommended torque (unless specified otherwise in these instructions).

TORQUE CHART FT-LB	
Fastener	Recommended Torque (ft-lb)
1/4-20	6
5/16-18	13
3/8-16	23
7/16-14	35
1/2-13	55
9/16-12	80
5/8-11	110
3/4-10	200
7/8-9	320
1-8	480

Before attempting any procedure in this book, the safety information in this manual must be read and understood by all personnel who have any part in the installation, preparation, transport, service, repair or use of this equipment.

For your protection, safety and information decals have been placed on the spreader to remind the operator of safety precautions and particular hazards.

DANGER

Remember it is better to have extra assistance and precautions in order to avoid injury.

Do not lift spreader by yourself, seek competent assistance before lifting spreader onto vehicle. Use lifting devices if available.

Park vehicle on level ground before installing the mount kit.

Follow all vehicle safety information.

Lifting equipment must be in good repair. Use according the lift manufacturer's instructions and other training materials.

Do not use electrical equipment in rain or other wet conditions.

WARNING

Personal protection equipment (PPE) must be worn to prevent accidental injury.

Rotating parts cause flying debris, wear safety glasses with side protection.

Wear face and hand protection when installing this kit, especially while drilling and areas where the metal is sharp from drilling.

Use genuine SnowEx parts for replacement. These meet the specific technical requirements.

Suitable and adequate mechanic's equipment is required for performing maintenance and service procedures.

CAUTION

Use genuine SnowEx parts for replacement. These meet the specific technical requirements.

Adequate mechanic's equipment is required for performing maintenance and service procedures.



Follow all instructions in the spreader's manual in addition to the instructions contained in the mount kit manual.

Installation Instructions



STEP 1

Attach the Hitch Adapter Plate (F51193) to the Spreader frame using the supplied fasteners. Tighten.

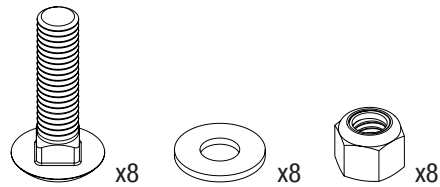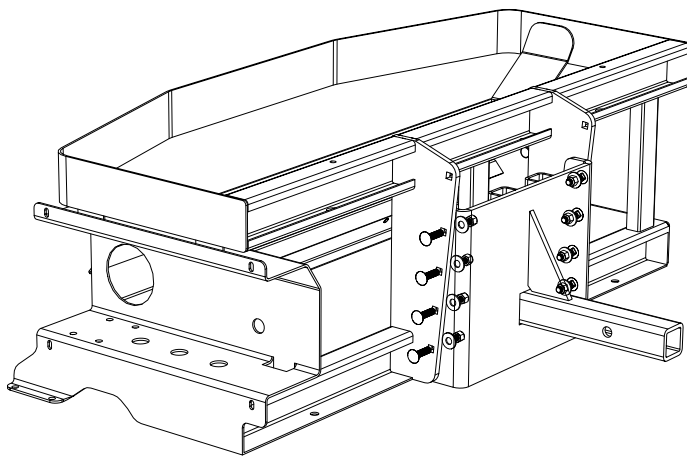

Hardware:


Bolt D6875 | 3/8"-16 X 1-1/2" Carriage Zinc

Washer D4125 | 3/8" Flat USS Zinc

Nut D4124 | 3/8"-16 Nylox Zinc

STEP 2

Insert the hitch into the vehicle's receiver. Lock with the Hitch Pin (D4136) and Hair Pin.

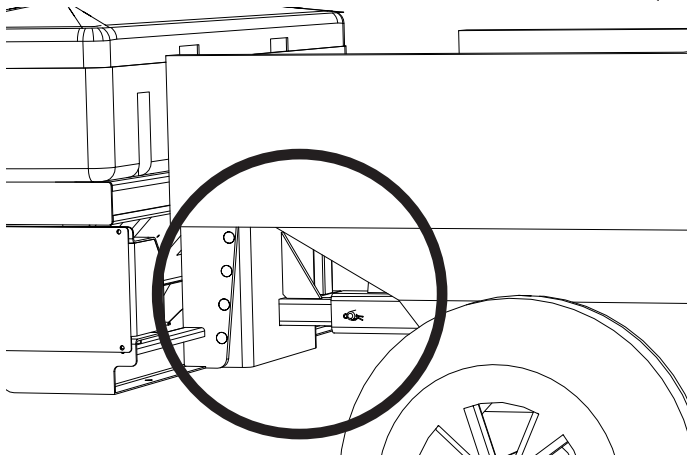

[illegible]

[illegible]

