

72100 Adapter Kit

Installation Instructions

ADAPTER KIT INSTALLATION


Install the plug-in harness according to the installation instructions provided with plug-in harness kit.

Connecting to Low-Beam Headlamps

1. Remove connector from the vehicle low-beam bulb. Plug low-beam connector into the mating plug-in harness connector, matching the OEM white/black wire to the COM wire from the low-beam plug-in harness connector.
2. Connect the plug-in harness low-beam connector into the vehicle low-beam bulb.

Connecting to High Beam Headlamps

1. Remove the connector from the vehicle high-beam bulb. Plug the high-beam connector into the mating adapter connector, matching the OEM white/black wire to the black adapter wire.
2. Plug the adapter connectors into the mating plug-in harness connectors as shown, matching the black adapter wire to the plug-in harness COM wire.
3. Connect the adapter connector to the vehicle high-beam bulb.

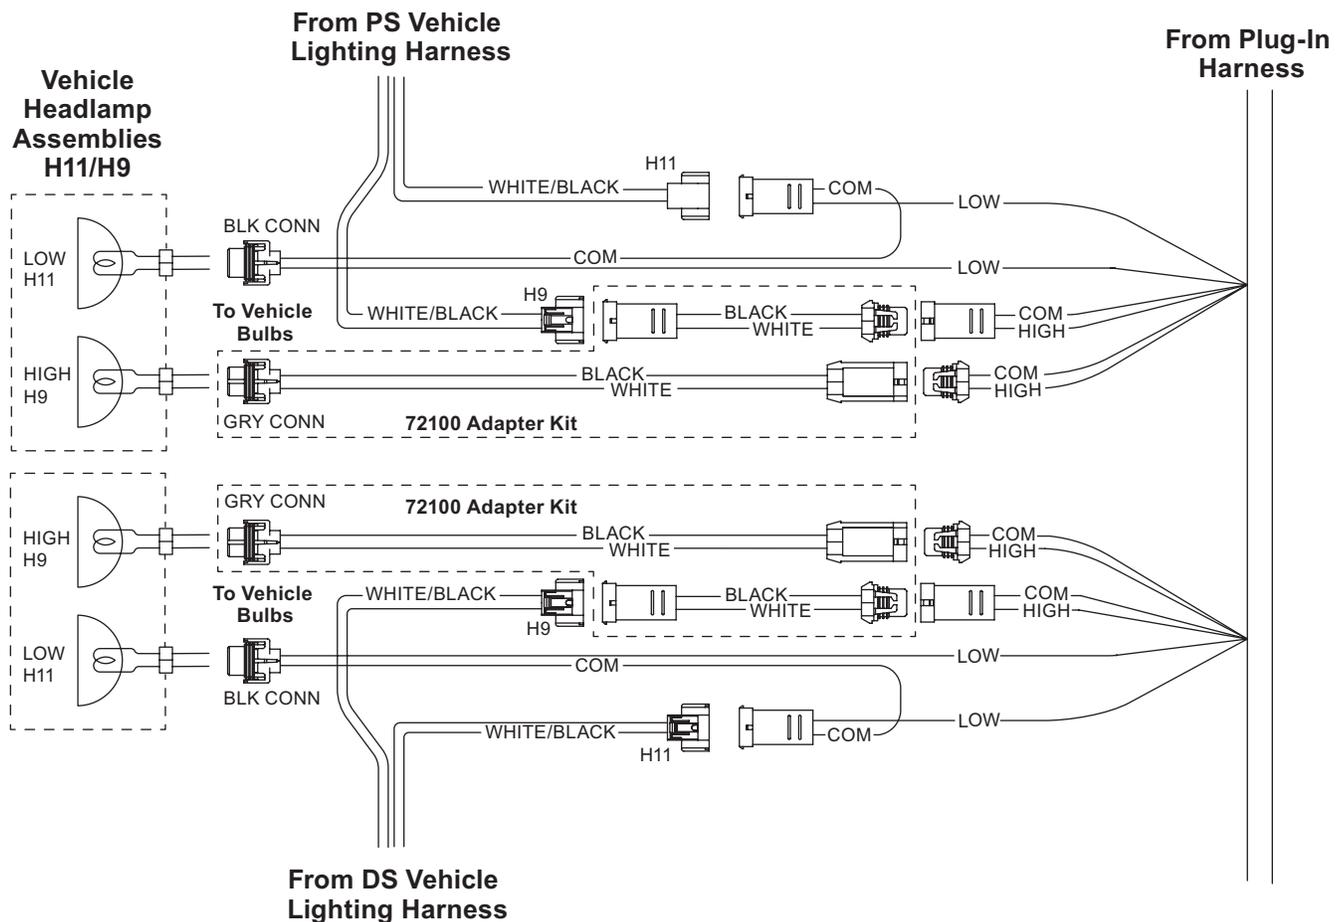

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. This equipment manufacturer or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. The company offers a limited warranty for all snowplows and accessories. See separately printed page for this important information.

Printed in U.S.A.
