

Back Drag Edge Kit

V-Plow Snowplows

INSTALLATION INSTRUCTIONS

⚠ WARNING

Do not exceed GVWR or GAWR, including blade and ballast. The rating label is found on the driver-side vehicle door cornerpost.

⚠ WARNING

Blade can drop unexpectedly. Place T-frame on jack stands. Failure to do so could result in serious personal injury.

⚠ CAUTION

Read this document before installing the back drag edge kit.


⚠ CAUTION

Use standard methods and practices when attaching snowplow and installing accessories, including proper personal protective safety equipment.

⚠ CAUTION

See your sales outlet for specific vehicle application recommendations before installation. Back drag edge kit weight information can be found in the online selection system.

1. Park the vehicle on a smooth, level, hard surface, such as concrete. Raise the blade, then turn the control OFF. From the side of the blade assembly, place jack stands under the T-frame.
2. Turn the control ON, then lower the blade until the T-frame rests on the jack stands. Turn the control and vehicle ignition OFF.
3. Remove and retain the locknuts securing the driver's side of the cutting edge to the blade. Leave the cutting edge in place and replace the bolts with the provided 5/8" x 2-1/2" carriage bolts.
4. Install the driver-side back drag edge against the back of the blade base angle. Secure with the provided 5/8" washers and the original locknuts.
5. Torque fasteners to 150 ft-lb.
6. Repeat Steps 3–5 on the passenger's side.
7. Turn the vehicle ignition and the control ON. Raise the blade until the T-frame is raised off the jack stands. Turn the control OFF and remove the jack stands.
8. Stand 8' clear of the blade and lower the blade to the ground.

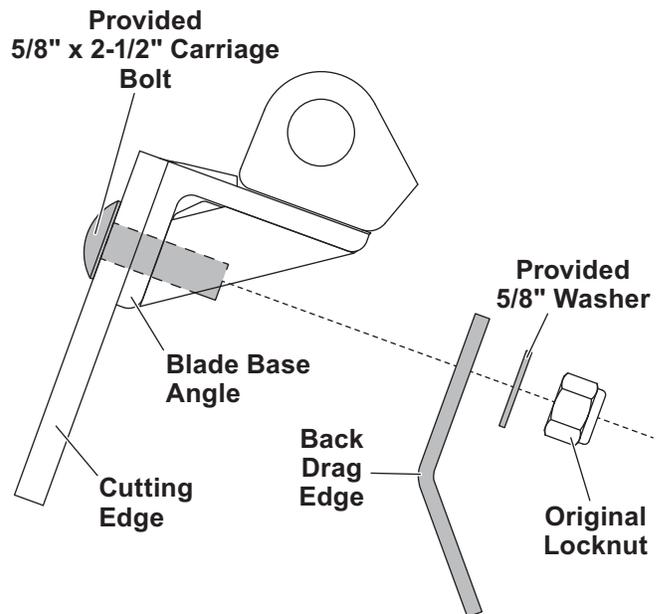

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. This equipment manufacturer or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. The company offers a limited warranty for all snowplows and accessories. See separately printed page for this important information.

Printed in U.S.A.
