




HELIXX™ Poly Hopper Spreaders

1.5, 2.25, 3.5 & 5.0 yd³

Installation Instructions

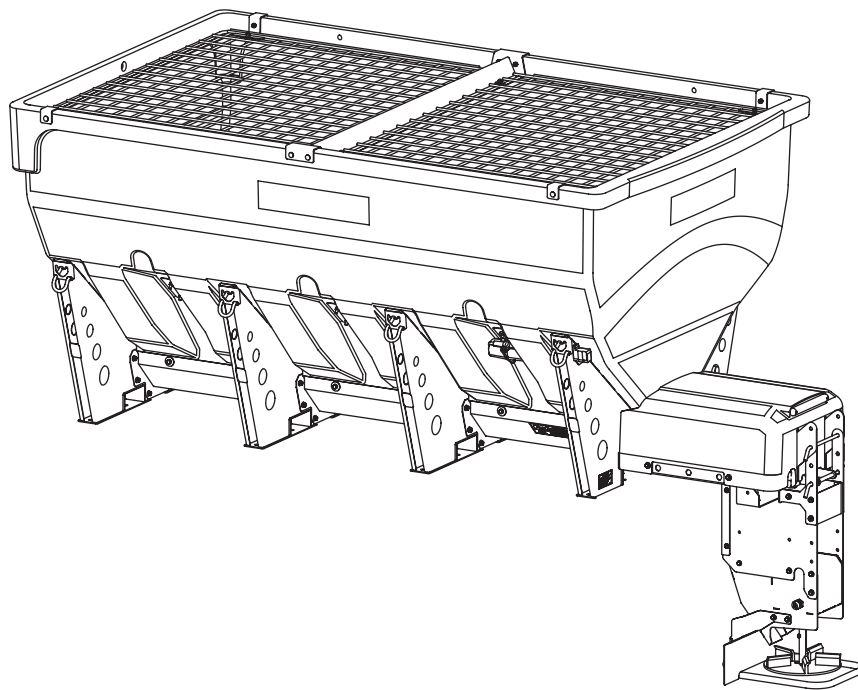

⚠ CAUTION

Read this document before installing or operating the spreader.

These Installation Instructions are for SnowEx® HELIXX Poly Hopper Spreaders with serial numbers beginning with 190101 and higher.

SAFETY

SAFETY DEFINITIONS

⚠ WARNING

Indicates a potentially hazardous situation that, if not avoided, could result in death or serious personal injury.

⚠ CAUTION


Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

NOTE: Indicates a situation or action that can lead to damage to your spreader and vehicle or other property. Other useful information can also be described.


WARNING/CAUTION LABELS

Become familiar with the warning and caution labels on the spreader.


NOTE: If labels are missing or cannot be read, see your sales outlet.

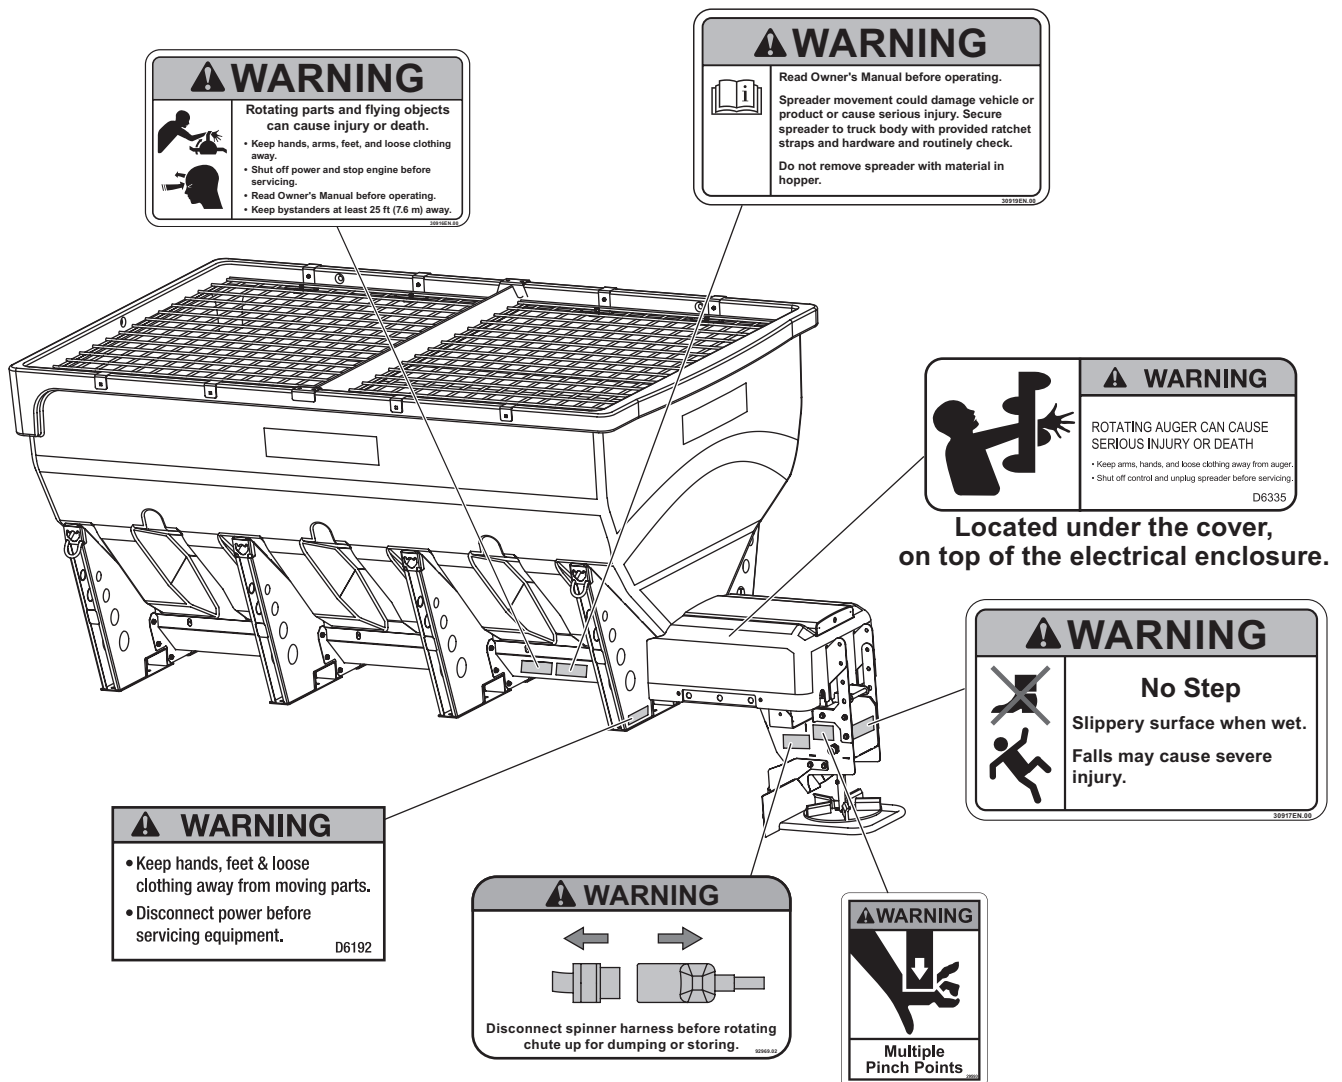

SAFETY

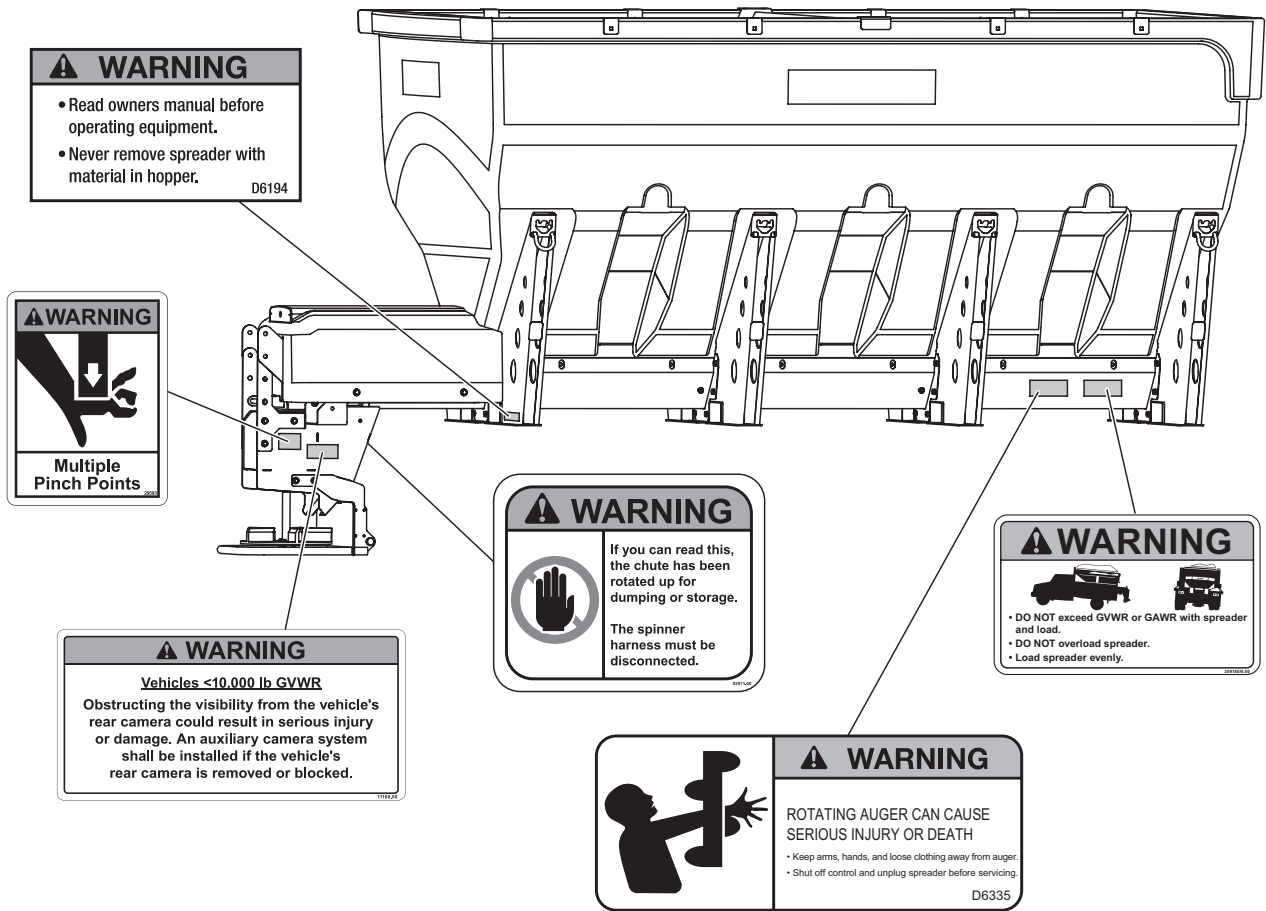


SERIAL NUMBER LABEL



TrynEx International, LLC
531 Ajax Drive
Madison Heights, MI 48071

HELIXX™ XX YD³ POLY HOPPER

YYMMDDLLXXXXZZZZZ



Code	Definition
YY	2-Digit Year
MM	2-Digit Month
DD	2-Digit Day
LL	2-Digit Location Code
XXXX	4-Digit Sequential Number
ZZZZZ	5–7-Digit Assembly Part Number

SAFETY

SAFETY PRECAUTIONS

Improper installation and operation could cause personal injury and/or equipment and property damage. Read and understand labels and the Owner's Manual before installing, operating, or making adjustments.

⚠ WARNING

- Driver to keep bystanders minimum of 25 feet away from operating spreader.
- Before working with the spreader, secure all loose-fitting clothing and unrestrained hair.
- Before operating the spreader, verify that all safety guards are in place.
- Before servicing the spreader, wait for auger and spinner to stop.
- Do not climb into or ride on spreader.

⚠ WARNING



Overloading could result in an accident or damage. Do not exceed GVWR or GAWR ratings as found on the driver-side vehicle door cornerpost. See Loading section to determine maximum volumes of spreading material.

⚠ WARNING

Do not install the control for this product in the deployment path of an air bag. Refer to vehicle manufacturer's manual for air bag deployment area(s).

⚠ WARNING

Vehicles <10,000 lb GVWR: Obstructing the visibility from the vehicle's rear camera could result in serious injury or damage. An auxiliary camera system shall be installed if the vehicle's rear camera is removed or blocked.

⚠ CAUTION

If rear directional, CHMSL light, or brake stoplights are obstructed by the spreader, the lights shall be relocated, or auxiliary directional or brake stoplights shall be installed.

⚠ CAUTION

During the hopper spreader installation we recommend the addition of an OSHA compliant Backup Alarm. This alarm is required for OSHA governed employers.

⚠ CAUTION

- Do not operate a spreader in need of maintenance.
- Before operating the spreader, reassemble any parts or hardware removed for cleaning or adjusting.
- Before operating the spreader, remove materials such as cleaning rags, brushes, and hand tools from the spreader.
- While operating the spreader, use auxiliary warning lights, except when prohibited by law.
- Tighten all fasteners according to the Torque Chart. Refer to Torque Chart for the recommended torque values.

⚠ CAUTION

Disconnect electric and/or hydraulic power and tag out if required before servicing or performing maintenance.

⚠ CAUTION



DO NOT leave unused material in hopper. Material can freeze or solidify, causing unit to not work properly. Empty and clean after each use.

NOTE: Lubricate grease fittings after each use. Use a good quality multipurpose grease.

PERSONAL SAFETY

- Remove ignition key and put the vehicle in PARK or in gear to prevent others from starting the vehicle during installation or service.
- Wear only snug-fitting clothing while working on your vehicle or spreader.
- Do not wear jewelry or a necktie, and secure long hair.
- Wear safety goggles to protect your eyes from battery acid, gasoline, dirt, and dust.
- Avoid touching hot surfaces such as the engine, radiator, hoses, and exhaust pipes.
- Always have a fire extinguisher rated BC readily available for flammable liquids and electrical fires.

SAFETY

CELL PHONES

A driver's first responsibility is the safe operation of the vehicle. The most important thing you can do to prevent a crash is to avoid distractions and pay attention to the road. Wait until it is safe to operate mobile communication equipment such as cell phones, text messaging devices, pagers, or two-way radios.

FIRE AND EXPLOSION

WARNING

Gasoline is highly flammable and gasoline vapor is explosive. Never smoke while working on vehicle. Keep all open flames away from gasoline tank and lines. Wipe up any spilled gasoline immediately.

VENTILATION

WARNING

Vehicle exhaust contains lethal fumes. Breathing these fumes, even in low concentrations, can cause death. Never operate a vehicle in an enclosed area without venting exhaust to the outside.

BATTERY SAFETY

CAUTION

Batteries normally produce explosive gases which can cause personal injury. Therefore, do not allow flames, sparks, or lit tobacco to come near the battery. When charging or working near a battery, always cover your face and protect your eyes, and also provide ventilation.

- Batteries contain sulfuric acid which burns skin, eyes, and clothing.
- Disconnect the battery before removing or replacing any electrical components.

NOISE

Airborne noise emission during use is below 70 dB(A) for the spreader operator.









VIBRATION

Operating spreader vibration does not exceed 2.5 m/s² to the hand-arm or 0.5 m/s² to the whole body.

TORQUE CHART

CAUTION

Read instructions before assembling. Fasteners should be finger tight until instructed to tighten according to torque chart. Use standard methods and practices when attaching spreader, including proper personal protective safety equipment.

Recommended Fastener Torque Chart					
Inch Fasteners Grade 5 and Grade 8					
Size	Torque (ft-lb)		Size	Torque (ft-lb)	
	 Grade 5	 Grade 8		 Grade 5	 Grade 8
1/4-20	8.4	11.9	9/16-12	109	154
1/4-28	9.7	13.7	9/16-18	121	171
5/16-18	17.4	24.6	5/8-11	150	212
5/16-24	19.2	27.3	5/8-18	170	240
3/8-16	30.8	43.6	3/4-10	269	376
3/8-24	35.0	49.4	3/4-16	297	420
7/16-14	49.4	69.8	7/8-9	429	606
7/16-20	55.2	77.9	7/8-14	474	669
1/2-13	75.3	106.4	1-8	644	909
1/2-20	85.0	120.0	1-12	704	995
Metric Fasteners Class 8.8 and 10.9					
Size	Torque (ft-lb)		Size	Torque (ft-lb)	
	 Class 8.8	 Class 10.9		 Class 8.8	 Class 10.9
M6 x 1.00	7.7	11.1	M20 x 2.50	325	450
M8 x 1.25	19.5	26.9	M22 x 2.50	428	613
M10 x 1.50	38.5	53.3	M24 x 3.00	562	778
M12 x 1.75	67	93	M27 x 3.00	796	1139
M14 x 2.00	107	148	M30 x 3.50	1117	1545
M16 x 2.00	167	231	M33 x 3.50	1468	2101
M18 x 2.50	222	318	M36 x 4.00	1952	2701
These torque values apply to fasteners except those noted in the instructions.					

LOADING

These Installation Instructions cover vehicles that have been recommended for carrying the hopper spreader. Please see your local dealer for proper vehicle applications.

WARNING

Overloading could result in an accident or damage. Do not exceed GVWR or GAWR as found on the driver-side cornerpost of vehicle.

MATERIAL WEIGHTS

CAUTION



Read and adhere to manufacturer's ice-control material package labeling including Safety Data Sheet requirements.

Material	Density		
	(lb/ft ³)	(lb/yd ³)	(kg/m ³)
Salt	80	2160	1282
Sand	100	2700	1602

Material densities are approximate and are based on dry, loose material. It is the responsibility of the operator to know the weight of the material to be spread and the vehicle carrying capacity.

SPREADER SPECIFICATIONS

Hopper Model	Overall Length (in)	Bed Length (in)	Empty Weight (lb)	Overall Width (in)	Bed Height (in)	Capacity Struck (yd ³)
1.5 yd ³	106	88	412	48.5	35	1.5
2.25 yd ³	115	92	443	48.5	41.5	2.25
3.5 yd ³	133	112	694	66.5	46.5	3.5
5.0 yd ³	133	112	718	66.5	54.5	5.0

CERTIFICATION

WARNING

New untitled vehicle installation of a spreader requires National Highway Traffic Safety Administration altered vehicle certification labeling. Installer to verify that struck load of snow or ice control material does not exceed GVWR or GAWR rating label and complies with FMVSS.

MOUNTING THE SPREADER

INSTALL HOPPER IN VEHICLE BED

1. Remove the strapping and bolts that secure the spreader to the pallet.
2. Remove the vehicle tailgate.

⚠ CAUTION


Before lifting, verify that the hopper is empty of material. The lifting device must be able to support the spreader's weight as shown in the Spreader Specifications table.

3. Lift the spreader and lower it into the vehicle bed. Be sure to center the hopper on the vehicle bed from side to side.


Lift the spreader in one of two ways.

- a. Use a forklift equipped with fork extensions to lift the spreader. Verify that the fork extensions slide through the fork pockets on the electrical enclosure and the hopper legs.

Verify that at least two fork pockets (per side) are used for 1.5 and 2.25 yd³ hoppers, and at least three fork pockets (per side) are used for 3.5 and 5.0 yd³ hoppers.

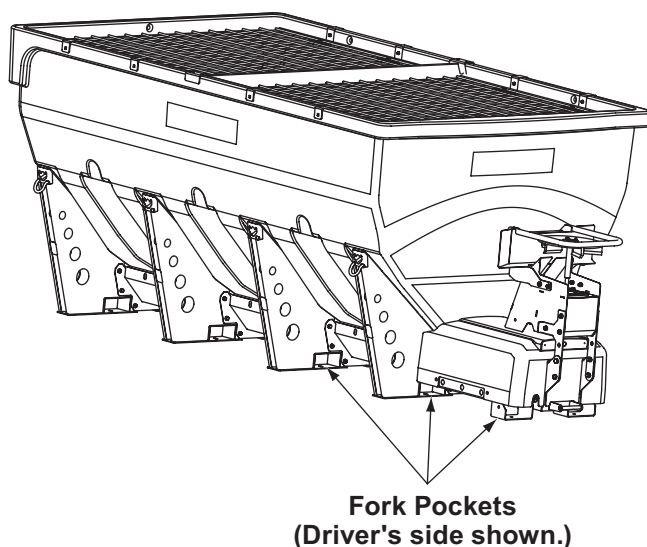

- b. Use slings or chains to lift the spreader by the four tie-down loops (two per side) located on the front and rear hopper legs.

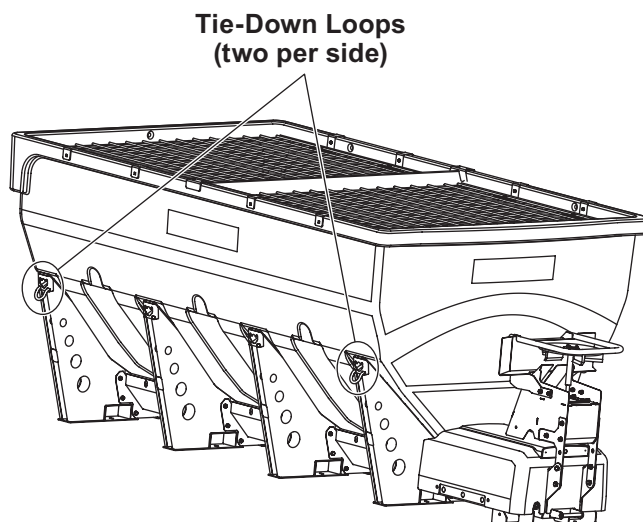


ATTACH SPINNER DRIVE ASSEMBLY

The spreader is shipped with the spinner drive assembly attached to the chute supports in the storage position.


1. Remove the four fasteners that secure the spinner drive assembly to the chute supports. Discard the fasteners and blocking (not shown).

NOTE: After removing the fasteners, the spinner drive assembly will no longer be attached to the spreader. Use caution to avoid injury and/or damaging the spinner drive assembly.

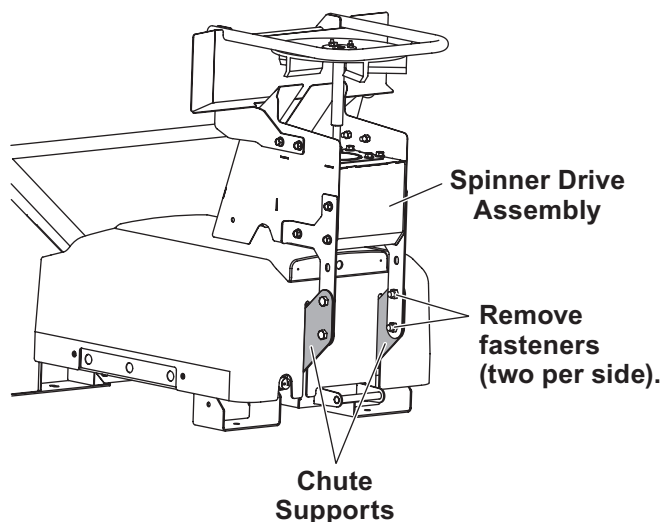


MOUNTING THE SPREADER

2. Carefully set the spinner drive assembly on the ground.
3. Orient the spinner drive assembly in the operating position, and secure to the chute supports with two locking pins. Install the top locking pin *first*, as shown (lower chute support hole). Use a cotter pin to secure each locking pin.

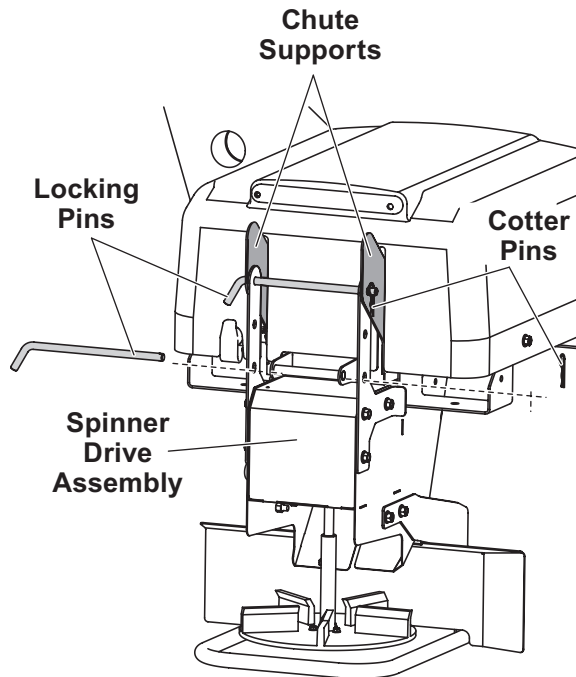

INSTALL MOUNTING HARDWARE

1. Position the spreader so that the spinner drive assembly is approximately 1" away from the rear of the vehicle.

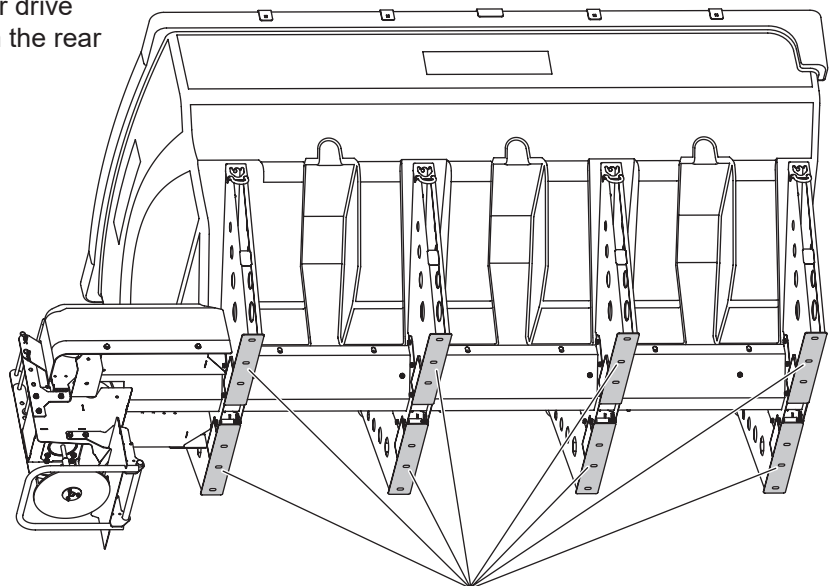

Mounting Hole Locations

⚠ CAUTION

Before drilling holes, check to be sure that no vehicle wiring or other components could be damaged.

2. Using the mounting holes in the spreader fork pockets as a template, mark the mounting hole positions on the vehicle bed (see below), and drill 9/16" holes for the frame cap screws.

NOTE: Pay special attention when drilling or clamping dissimilar metals to aluminum bodies. Galvanic corrosion can occur if not handled properly. Contact vehicle manufacturer for recommended attachment practices.

3. Secure the spreader to the vehicle bed through the fork pockets, using *at least* one fastener per fork pocket. Use 1/2" hardware as required by the vehicle application.

⚠ WARNING

Spreader shall be bolted to vehicle frame. Do not rely on the tie-down chains or straps alone to hold spreader in vehicle.

NOTE: If the mounting holes are not directly over the vehicle box supports, the vehicle bed must be braced to the frame to prevent buckling or deforming the vehicle bed.




MOUNTING THE SPREADER

Construct Frame Spacer

Measure the distance from the front end of the hopper sill to the front of the vehicle bed. Construct a frame spacer from 2" x 8" lumber to fit that area.

⚠ CAUTION

Failure to construct and install the frame spacer could result in damage to the spreader and/or vehicle.

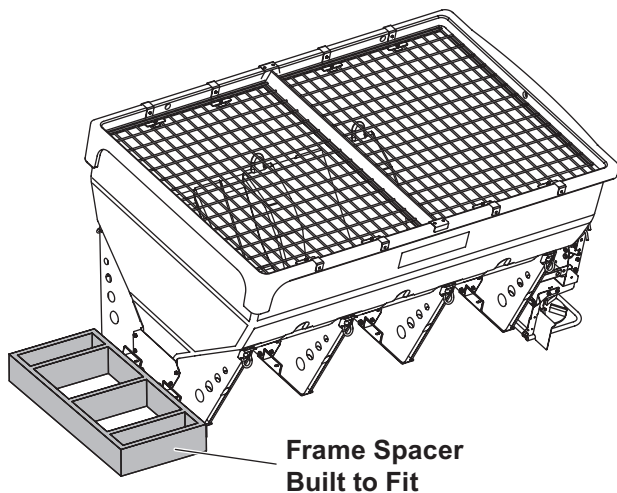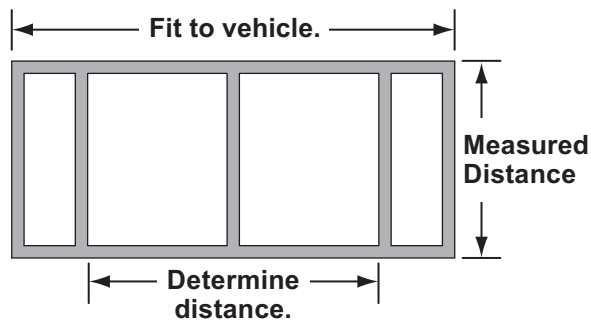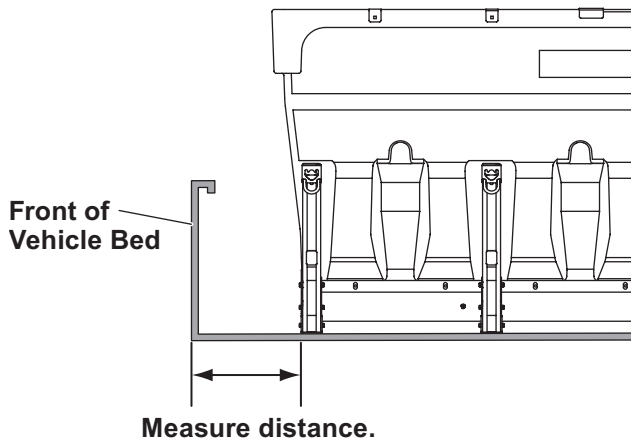

Install Tie-Down Ratchet Straps

Install ratchet straps from the tie-down loops on the spreader hopper legs diagonally outward to the vehicle frame.

WIRING AND HARNESS INSTRUCTIONS

WIRING INSTRUCTIONS

Spreaders are shipped from the factory with the spreader harness wired to the motor and spreader module.

To properly wire the hopper spreader, follow this recommended installation sequence:

1. Install the vehicle battery cable and control harness included with the spreader, following the steps given below.
2. Install the cab control as described under "Cab Control Installation."

NOTE: Use dielectric grease on all electrical connections.

Vehicle Battery Cable Installation

1. Before beginning this installation, remove the battery cables from the vehicle battery.
2. Using the 1/4" x 3/4" cap screws, 1/4" flat washers, and 1/4" locknuts, mount the fuse holder near the vehicle battery so that the 22" battery cable can be installed from the POSITIVE (+) battery terminal to the fuse holder. Install the fuse into the fuse holder and hand tighten the nuts.
3. Attach one end of the 22" battery cable to the fuse holder so that the ring terminal is on top of the fuse. Replace the lock washer and nut.
4. Route the vehicle battery cable from the rear of the vehicle bed to the vehicle battery. Make sure that the path avoids any hot, sharp, or moving parts. Routing will vary from vehicle to vehicle.
5. Using cable ties, secure the battery cable to the vehicle. Verify that the harness cannot drop onto the road when it is disconnected from the spreader.
6. Attach the vehicle battery cable red wire to the remaining fuse holder stud so that the ring terminal is on top of the fuse. Replace the lock washer and nut.
7. Torque the fuse holder nuts to 106–159 in-lb and snap the fuse holder cover into place.
8. Attach the other end of the 22" battery cable to the POSITIVE (+) battery terminal.
9. Attach the vehicle battery cable black wire to the NEGATIVE (–) battery terminal.

WIRING AND HARNESS INSTRUCTIONS


Vehicle Control Harness Installation

1. Plug the vehicle harness into the spreader harness.
2. Lay out a path for routing the vehicle control harness from its attachment point on the vehicle battery cable into the cab of the vehicle. Make sure that the path avoids any hot, sharp, or moving parts of the vehicle. Routing will vary from vehicle to vehicle.
3. Choose a cab control mounting location that can be reached by the harness. The location must be within easy reach of the vehicle operator without restricting access to vehicle controls or instrumentation.

Do not mount the control in areas prohibited by the vehicle manufacturer for reasons of crashworthiness. See the vehicle's body builder's book, owner's manual, or service manual for details. The shaded portions in the illustration below show the most commonly restricted areas.

⚠ CAUTION

Do not alter, modify, or install additional components in shaded areas shown below. Failure to comply may interfere with airbag deployment or cause injury to operator in an accident.

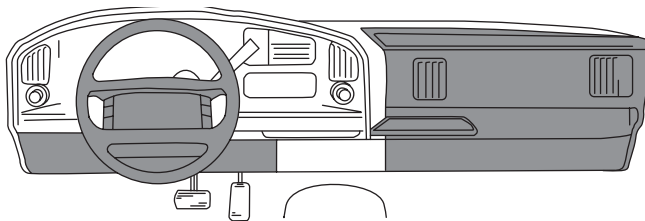

⚠ CAUTION



Before drilling any holes, check both sides of the material for any wires, fuel lines, fuel tanks, etc., that may be damaged by drilling.

4. Drill a 5/8" hole in the fire wall so that the vehicle control harness can reach the desired cab control location.

5. Insert a rubber grommet into the hole.
6. Route the harness as laid out in Step 2.
7. Secure the vehicle control harness to the vehicle.
8. Attach the red wire to a switched accessory circuit.

Cab Control Installation

1. Confirm that the chosen cab control mounting position will not interfere with other equipment or allow unintentional starting of the spreader.
2. Install the vehicle side of the mounting bracket using three #10 x 3/8" Phillips head tapping screws.

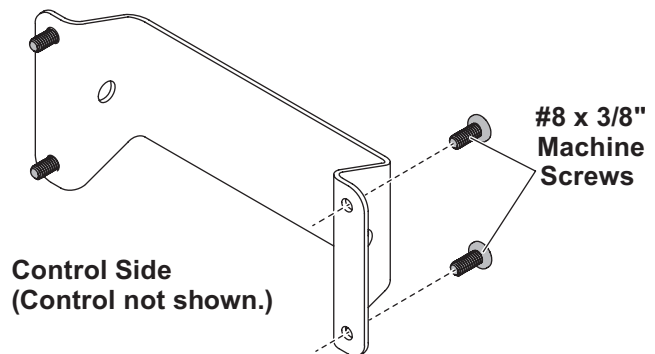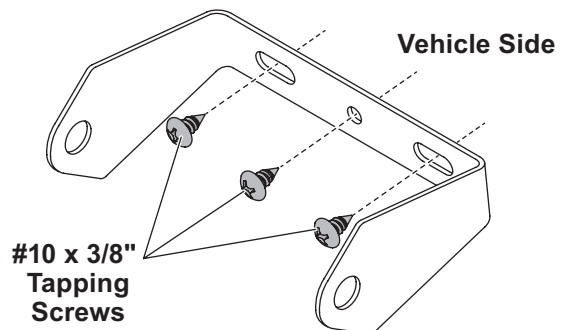


3. Install the control side of the bracket to the control using four #8 x 3/8" Phillips head machine screws.

WIRING AND HARNESS INSTRUCTIONS

4. Install the control side of the bracket to the vehicle side using 1/4" x 1/2" Phillips head machine screws, 1/4" nylon shoulder washers, 1/4" lock washers, and 1/4" locknuts.


(Control not shown.)

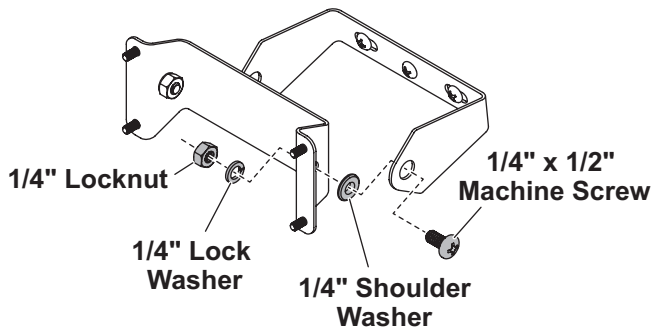

5. Plug the vehicle control harness into the cab control.

Harness Plug Cover

Install the supplied harness plug cover by slipping the loop end of the cover over the harness plug.

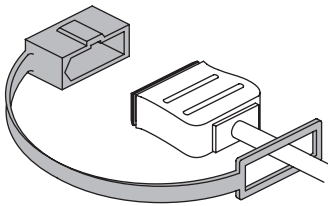

CENTER HIGH-MOUNTED STOPLIGHT (CHMSL)

An LED center high-mounted stoplight is standard equipment on all HELIXX™ poly hopper spreaders.

The orange wire from the spreader vehicle harness is for the CHMSL. Splice the orange wire into an existing CHMSL circuit wire tap. Location of the tap varies according to specific vehicle model, and may be located either in the cab or in the rear of the vehicle.

Always use the tap provided by the OEM.

DO NOT splice the orange wire into the wire coming off the stoplight switch by the brake pedal. Splicing at the stoplight switch may affect transmission shifting, cruise control, or other vehicle functions.

For vehicles with a tap along the frame rail or at the rear cross member:


1. Cut the tape holding the orange wire where it exits the convoluted tubing.
2. Pull out the orange wire to the location where the vehicle CHMSL tap is located. Cut a small V notch in the tubing for the wire to exit. Pull the wire through the V notch and tape the tubing on each side of the exit point.
3. Trim any excess length from the orange wire and splice into the vehicle tap.

Coil and cable-tie the brown wire away from any hot, sharp, or moving parts.


WIRING AND HARNESS INSTRUCTIONS

INSTALL AUXILIARY WORK LIGHT

1. Disconnect the CHMSL harness, and then remove the electrical enclosure cover. Set the cover aside.
2. Secure the U-clip to the rear attachment assembly using the supplied mounting stud, lock washer, and locknut.

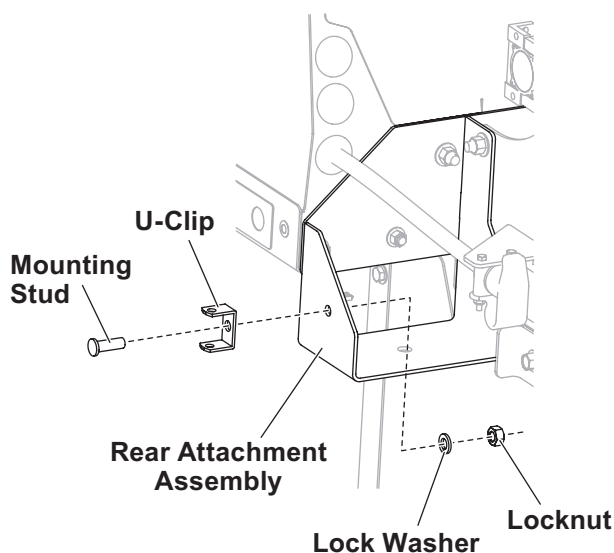

3. Attach the work light to the U-clip using the supplied hex bolt, lock washer, and hex locknut.

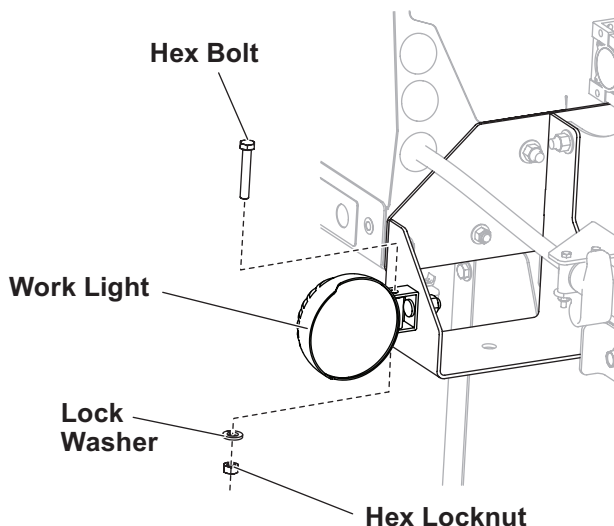

4. Plug the work light electrical harness into the work light power harness, which is already routed through the electrical enclosure.
5. Reinstall the electrical enclosure cover, and reconnect the CHMSL harness.

6. Adjust the work light position as needed.


- Loosen and rotate the U-clip to adjust the work light up and down.
- Loosen the hex bolt to adjust the work light from side to side.

INSTALL ACCESSORIES

To install any of the accessory kits that are available for the HELIXX™ poly hopper spreaders, follow the instructions included with each kit.


ELECTRICAL COMPONENTS

VEHICLE HARNESS DIAGRAM

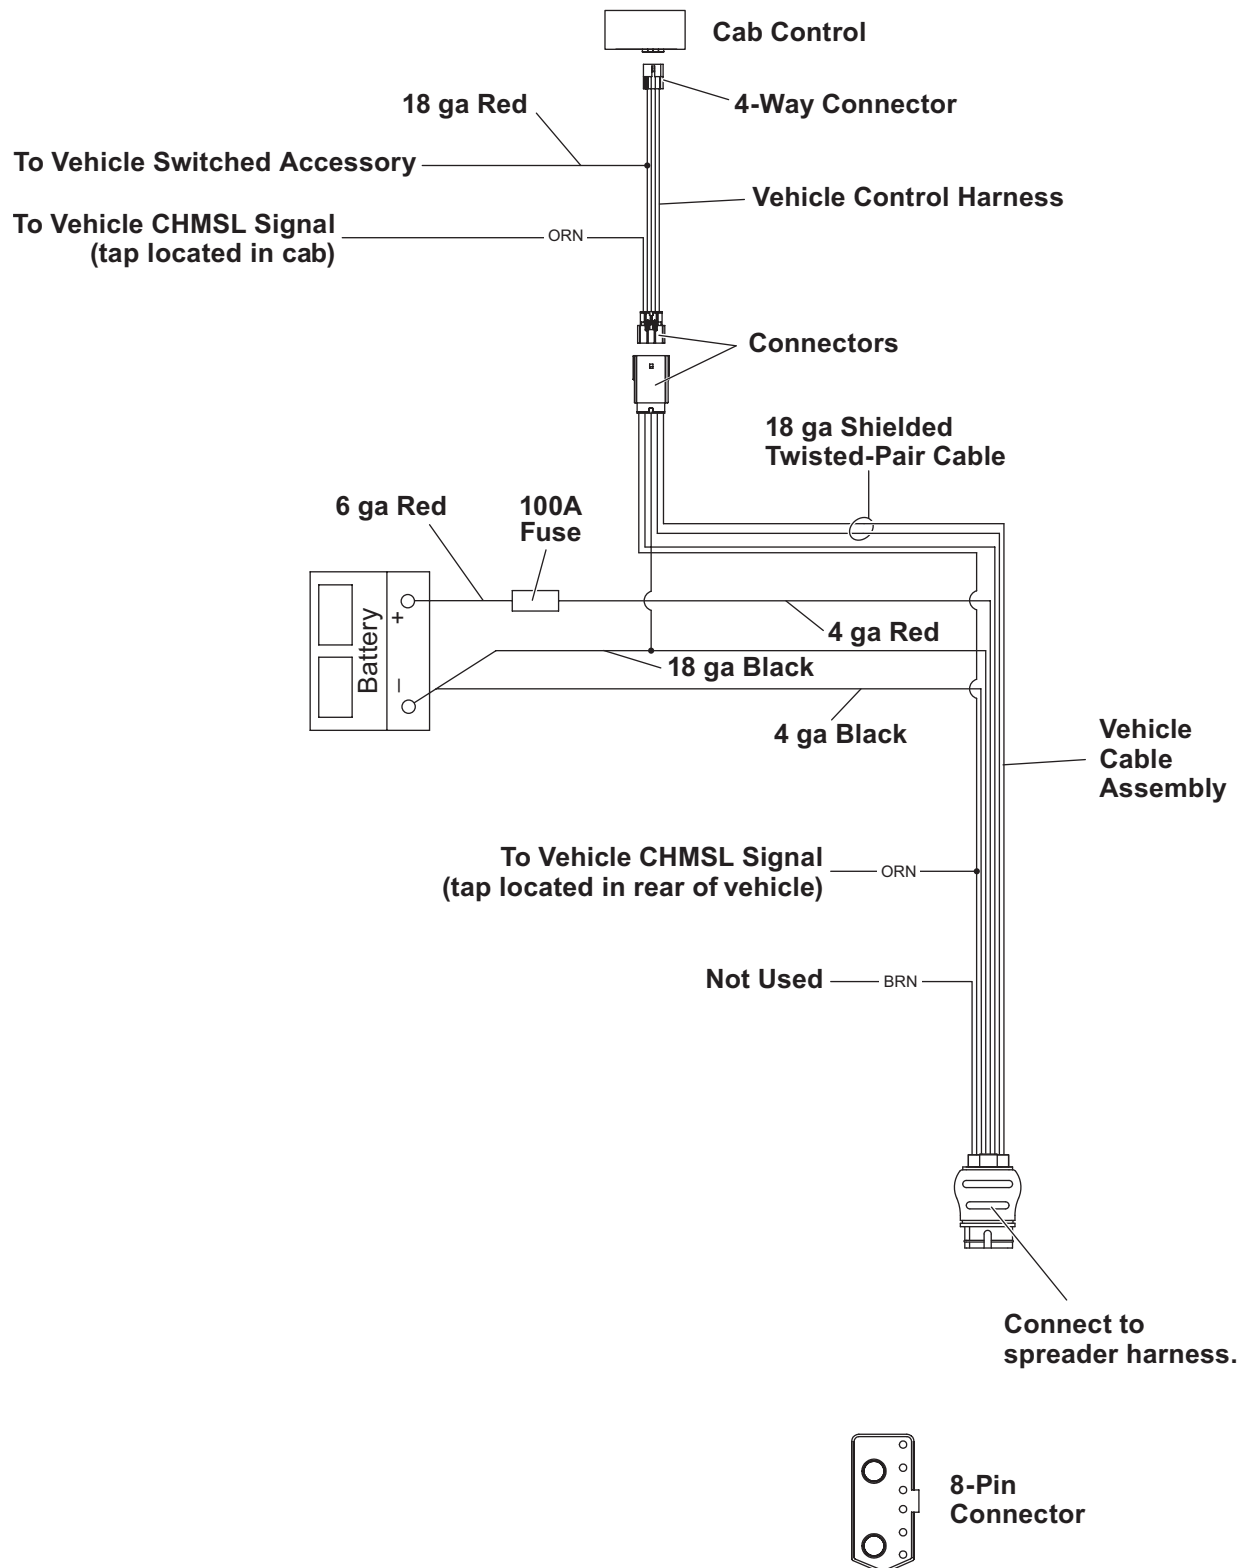

ELECTRICAL COMPONENTS

ELECTRICAL CONTROL BOX SCHEMATIC

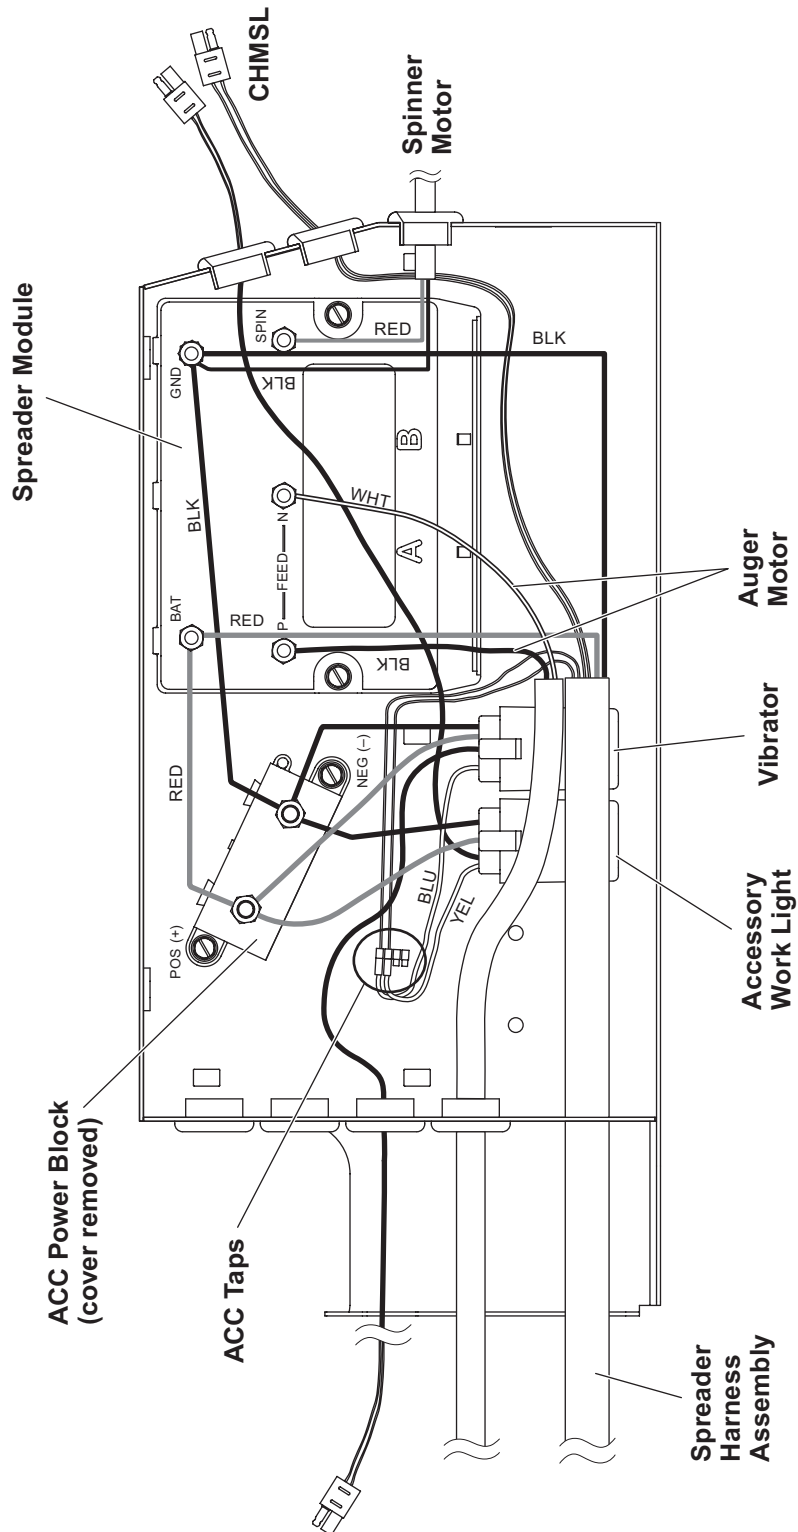

FINAL ADJUSTMENTS

FINAL CHECKLIST

- ☐ Verify that the auger and spinner turn freely.
- ☐ Verify that dielectric grease is applied to all electrical connections.
- ☐ Verify that wire harnesses and battery cables are properly secured away from hot or moving parts.
- ☐ Verify that the vehicle battery cable has sufficient ground clearance when the spreader is removed from the vehicle.
- ☐ Verify that the CHMSL is properly wired and in working condition.
- ☐ Verify that the auxiliary work light is properly wired and in working condition.
- ☐ Verify that the vibrator indicator light illuminates and that the vibrator is in working condition.

NOTE: Periodically throughout the snow and ice control season, verify that mounting devices are secure.



TrynEx International, LLC
531 Ajax Drive
Madison Heights, MI 48071-2429
www.snowexproducts.com

 A DIVISION OF DOUGLAS DYNAMICS, LLC

Copyright © 2022 Douglas Dynamics, LLC. All rights reserved. This material may not be reproduced or copied, in whole or in part, in any printed, mechanical, electronic, film, or other distribution and storage media, without the written consent of TrynEx International, LLC. Authorization to photocopy items for internal or personal use by TrynEx International outlets or spreader owner is granted.

TrynEx International reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. TrynEx International or the vehicle manufacturer may require or recommend optional equipment for spreaders. Do not exceed vehicle ratings with a spreader. TrynEx International offers a limited warranty for all spreaders and accessories. See separately printed page for this important information. The following are registered (®) or unregistered (™) trademarks of Douglas Dynamics, LLC: HELIXX™, SnowEx®.

Printed in U.S.A.